Roland

Roland-PrintServer

Network Settings Guide

If you're using the software RIP from Roland DG Corp., then this document is for you. To connect and use the software RIP included with the printer with a network, make the settings as described in this document. Thank you very much for purchasing the product.

- To ensure correct and safe usage with a full understanding of this product's performance, please be sure to read through this manual completely and store it in a safe location.
- Unauthorized copying or transferral, in whole or in part, of this manual is prohibited.
- The contents of this operation manual and the specifications of this product are subject to change without notice.
- The operation manual and the product have been prepared and tested as much as possible. If you find any misprint or error, please inform us.
- Roland DG Corp. assumes no responsibility for any direct or indirect loss or damage which may occur through use of this product, regardless of any failure to perform on the part of this product.
- Roland DG Corp. assumes no responsibility for any direct or indirect loss or damage which may occur with respect to any article made using this product.

Table of Contents

1. Getting Started	2
	2
About the Roland-PrintServer	
Ethernet Cable Connection	
Overview of Settings	
2. Making the Settings for Windows 2000/XP	4
Step 1: Settings for Windows 2000/XP	
Step 2: Roland-PrintServer Settings	
Step 3: Port Settings for the Software RIP	7
3. Making the Settings for MacOS X	8
Step 1: Settings for Macintosh	
Step 2: Roland-PrintServer Settings	
Step 3: Port Settings for the Software RIP	10
4. Appendix	11
Roland-PrintServer Reference	11
What to do if	11
Resetting the Roland-PrintServer	
5	

Windows is a registered trademark or trademark of Microsoft® Corporation in the United States and/or other countries.

Macintosh, Power Macintosh and Mac OS are registered trademarks or trademarks of Apple Computer, Inc. in the USA and other countries.

Adobe and Acrobat are trademarks of Adobe Systems Incorporated.

Other company names and product names are registered trademarks or trademarks of their respective holders.

Copyright © 2002 Roland DG Corporation

http://www.rolanddg.com/

About the Roland-PrintServer

The Roland-PrintServer makes it possible to connect printers and other devices from Roland DG Corp. via Ethernet and use them in a network environment. There are two types: one built in to the printer or the like, and an external type. It is compatible with 100Base TX and 10Base T (switched automatically).

* The usable features of the Roland-PrintServer are dependent on the printer it is combined with. Not all functions may be available for use.

Ethernet Cable Connection

Use Category 5 twisted-pair Ethernet cable. For connection to a hub, use straight cable.



Overview of Settings

The software RIP packed with a printer uses the TCP/IP.

Setup Sequence



Refer to the following for specific setup procedures.

- Windows 2000/XP See p.4 "2. Making the Settings for Windows 2000/XP"
- Macintosh (MacOS X) See p.8 "3. Making the Settings for MacOS X"

Point For the Network Administrator

To make the settings for Roland-PrintServer in step 2, you use either "Net Tool" or "Mac Tool." You can run these in the following operating environments.

Net Tool

• Windows 95/98/Me/2000/XP

Mac Tool

- MacOS X
- MacOS 9.x (CarbonLib extensions version 1.2.5 or later required)

Important! The explanations in this section assume a small-scale network using a single hub. In a large network, unsuitable settings may have a major impact on the functioning of the entire network. Decide on setting values only after careful discussion with the network's administrator.

Step 1: Settings for Windows 2000/XP

- Log on to Windows as a member of the "Administrators" group.
- 2 For Windows XP:

From the [Start] menu, click [Control Panel]. Click [Network and Internet Connections], then click [Network Connections].

For Windows 2000:

From the [Start] menu, click [Settings], then click [Network and Dial-up Connections].

- 3 Double-click the [Local Area Connections] icon. Click [Properties].
- 4 Select [Internet Protocol (TCP/IP)], then click [Properties].

If the check box for [Internet Protocol (TCP/ IP)] is unselected, then click the check box to select it.

 5 Select [Use the following IP address]. Enter the information as shown below, then click [OK].
 [IP Address]: 192.168.0.XXX

[Subnet Mask]: 255.255.255.0

- * Here, "XXX" may be any number you want from 1 to 254. However, be sure to specify a number that does not duplicate a number used for another computer or device.
- 6 Close the [Local Area Connections] window.



General Authentication Advanced
Connect using:
Intel(R) PR0/100 VE Network Connection
This connection uses the following items:
Client for Microsoft Networks
File and Printer Sharing for Microsoft Networks
QoS Packet Scheduler
Internet Protocol (TCP/IP)
Install Uninstall Properties
Description
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.
Show icon in notification area when connected
OK Cancel

Internet Protocol (TCP/IP) Prop	erties ?X
General	
You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings.	matically if your network supports ask your network administrator for
O Dbtain an IP address automatica	aly
- ⊕ U₂e the following IP address: —	
JP address:	192.168.0.101
Sybnet mask:	255.255.255.0
Default gateway:	
O Dbtain DNS server address auto	matically
 Use the following DNS server ac 	Idresses:
Preferred DNS server:	
Alternate DNS server:	
	Advanced
	OK Cancel

Step 2: Roland-PrintServer Settings

 Install and set up Net Tool in Windows.

Open the Roland-PrintServer CD-ROM and double-click [NetTool], then [NetTool.exe]. The Setup program starts. Follow the messages to install.

2 Switch on the power to the printer (the main power). If you're using an external unit, switch on the power to the Roland-PrintServer.



From the [Start] menu, click [All Programs] - [PRINTSERVER-Net Tool]
 - [PRINTSERVER-Net Tool] to start Net Tool. (*See note.)

A list of print servers found on the network is displayed.

- **4** Select the target Roland-PrintServer. If you're making the setting for the first time, the IP address is "000.000.000.000."
- **5** Click [Installation], then [IP wizard]. When the screen for selecting manual or automatic setup appears here, choose [Manual TCP/IP configuration], then click [Next]. (This screen does not appear when you're making the settings for the first time.)

6 Enter the information as shown below, then click [Next].
 [IP Address]: 192.168.0.XXX
 [Subnet Mask]: 255.255.255.0

- * Here, "XXX" may be any number you want from 2 to 254. However, be sure to specify a number that does not duplicate the setting you made in Step 1.
- 7 Make sure the setting is correct, then click [Finish]. Click [OK].

	NetTool					
Eile Filter Actions	Installation	<u>S</u> earch	<u>E</u> xtras	Help		
× � &		5 0	Ø	ଙ୍ C		
	IP	Address	Δ	NetWare N	ame	Туре
E QAI	😨 – 000	000.000	.000			Roland-Pr
I	•					
Ready						1

🙁 IP Wizard for: ICO4CEOD	?[x
Enter the IP address of the print server, the address of the multicast router foun	and the submet mask. If 'Multicast router as gateway' is enabled d is used as gateway. Disable this parameter if you want to edit the gateway manually.
IP address Subnet mask Gateway	192 168 0 102 255 255 0 000 0000 0000 0000 0000 0000 If Multicast router as gateway 1000 1000
	Back Cancel

(Continued on the next page.)

8 When the icon in the list changes to a printer and the IP address you set appears, the wizard ends. Quit Net Tool.

If the icon remains unchanged (""")"), the IP address or another setting is unsuitable. Redo the settings.

The """ icon does not indicate a problem. It indicates that the printer is not on line.

	-NetTool		
<u>File</u> Fi <u>l</u> ter <u>A</u> ctions	Installation Search E>	tras <u>H</u> elp	
× × ×	○ # 6 ●	ମ ଏ ପ	
	IP Address /	NetWare Name	Туре
	192.168.000.10	2 ICO4CEOD	Roland-Pri
Pearty	<u>.</u>		1

*Note

If you're using Windows XP Service Pack 2 (SP2) or later, a [Windows Security Alert] dialog box may appear. If this happens, click [Unblock]. Blocking NetTool may prevent correct operation.



- Under Windows XP SP2 or later, making the setting in [Windows Firewall] for [Don't allow exceptions] may prevent NetTool from operating correctly.
- ➤ Under Windows XP Service Pack 1 (SP1), enabling [Internet Connection Firewall] may prevent NetTool for operating correctly.

() Point For the Network Administrator

In procedure 5 on the previous page, clicking [Actions], then [Properties] displays an advanced setting screen for administrators.

* Usable features depend on the printer using in combination. Not all functions may be available for use.

Step 3: Port Settings for the Software RIP

Make the settings for the software RIP. For the output destination, specify the IP address for the Roland-PrintServer you set in Step 2. For information about how to make the settings, refer to the documentation for the software RIP.

Important! The explanations in this section assume a small-scale network using a single hub. In a large network, unsuitable settings may have a major impact on the functioning of the entire network. Decide on setting values only after careful discussion with the network's administrator.

Step 1: Settings for Macintosh

(🕈) Point

If a number of users are registered in MacOS X, log in using a user name with administrator rights.

- **1** From the Apple menu, open [System preferences]. Click [Network].
- 2 For [Show], select Ethernet ([Built-in Ethernet] or the like). Click the [TCP/IP] tab.
- For [Configure], select [Manually]. Enter the information as shown below, then click [Apply Now].
 [IP Address]: 192.168.0.XXX

[Subnet Mask]: 255.255.255.0

* Here, "XXX" may be any number you want from 1 to 254. However, be sure to specify a number that does not duplicate a number used for another computer or device.

000		Network	8
	Location: Un	titled 🗘	
Show: Built-in	Ethernet	*	
	TCP/IP PPPoE	AppleTalk Proxies	
Confi	gure: Manually	*	
		Domain Name Servers	(Optional)
IP Add	iress: 192.168.0.101		
Subnet I	Mask: 255.255.255.0		
Ro	outer:	Search Domains	(Optional)
Ethernet Adr	tress: 00:30:65:c7:7a	Example: apple.com, earth	link.net

4 Quit [System preferences].

Step 2: Roland-PrintServer Settings

- **1** Switch on the power to the printer (the main power). If you're using an external unit, switch on the power to the Roland-PrintServer.
- 2 Open the Roland-PrintServer CD-ROM and click [MacTool Carbon], then [PRINTSERVER-MacTool] to start Mac Tool.
- 3 Click [Start]. A list of print servers found on the network is displayed.
- **4** Select the target Roland-PrintServer. If you're making the setting for the first time, the IP address is displayed in blue as "000.000.000.000."
- 5 Click [Tools], then [IP Wizard], and enter the information as shown below.

[IP Address]: 192.168.0.XXX

- * Here, "XXX" may be any number you want from 2 to 254. However, be sure to specify a number that does not duplicate the setting you made in Step 1.
- 6 Click [Set] and check to make sure a green light is displayed. Click [Done].

If a red light appears, it means the IP address is unsuitable. Enter another one.

7 Quit Mac Tool, then start it again. Click [Start]. If the IP address you set is displayed in black, then you're finished. Quit Mac Tool.

Network Scout
Scanning Network
Search:
O ATalk/NBP ○ Both ● IP/SLP
(ATalk takes 1s/Zone under MacX)
Cancel Start





00	00	MacTool		
C	Name	Address	Version	C
~ 6	a 192.168.0.0 (001)			1
		192.168.000.102	9.4.4	Rol
Info:	Objects: 1 ATalk:			de .

(🕙 Point For the Network Administrator

In procedure 5 above, clicking [PServer Table], then [Configure PrintServer] displays an advanced setting screen for administrators.

* Usable features depend on the printer using in combination. Not all functions may be available for use.

Step 3: Port Settings for the Software RIP

Make the settings for the software RIP. For the output destination, specify the IP address for the Roland-PrintServer you set in Step 2. For information about how to make the settings, refer to the documentation for the software RIP.

Roland-PrintServer Reference

For detailed information about the features of the Roland-PrintServer, refer to the "Roland-PrintServer User Manual" on the Roland-PrintServer CD-ROM. This is a manual in electronic format (PDF format). To view it, install and set up Adobe Acrobat Reader.

* The usable features of the Roland-PrintServer are dependent on the printer it is combined with. Not all functions may be available for use.

"Roland-PrintServer User Manual"

Location: [Manual] - [English] - [User.pdf]

Adobe Acrobat Reader Setup Program

For Windows: [Acrobat] - [English] - [Ar405eng.exe] (Runs under Windows 95 or later.)

For Macintosh: [Acrobat] - [English] - [Reader Installer] (Runs under Power Macintosh System 7.5 through MacOS 9.x, and under MacOS X Classic.)

What to do if...

Printing over the network is not possible.

Make sure both green lights on the Roland-PrintServer are illuminated.

* If you're using a built-in type, the green lights are next to the Ethernet connector.

If one green light is dark, switch off the power to the printer (the main power) or the Roland-PrintServer. Again switch on the power and check the green lights.

If one green light remains dark even after you reset the power, it means the Ethernet cable connection is not suitable. Make sure it is securely inserted all the way, as far as it will go. Also, try replacing the cable with a new one. Make sure that the crossover and straight cables are used correctly. (If the connection is made through a hub, use straight cables.)

If one green light is flashing, it means the Roland-PrintServer settings are not suitable. Try making the settings for the IP address and the like again. If this does not correct the problem, reset the Roland-PrintServer and make the settings again. The resetting method is described on the next page in this document.

Both green lights are illuminated, but printing is not possible.

Make sure the settings for the IP address and the like are appropriate. The network connection will not be made if the appropriate settings are not made both on the computer and on the Roland-PrintServer. Try making the settings again as you check for duplicate IP addresses and typing errors.

Check the port setting for the software RIP. In the software RIP, specify the IP address assigned to the Roland-PrintServer.

Make sure the network routing is suitable. Try connecting the computer and the Roland-PrintServer to the same hub, or connecting then directly using a crossover cable. If this makes it possible to perform printing, it means the problem is in the network itself.

I can't tell what IP address is assigned to the Roland-PrintServer.

Follow the same procedures for making settings described in this document and use Net Tool or Mac Tool to search for the Roland-PrintServer. This displays the IP address that has been set.

The Roland-PrintServer is no longer visible.

If searching with Net Tool or Mac Tool fails to display the Roland-PrintServer, it is possible that unsuitable settings were made for the Roland-PrintServer. Reset the Roland-PrintServer and make the settings for the IP address and the like again. The resetting method is described later in this document.

Resetting the Roland-PrintServer

Follow the steps below to clear all settings and return them to the factory defaults.

- 1. Switch the printer's main power off (or Roland-PrintServer).
- 2. Keep the small blue button pressed.
 - * If you're using a built-in type, the blue button is next to the Ethernet connector.
- 3. Switch the printer's main power on (or Roland-PrintServer). The green and yellow lights are blinking rapidly.
- 4. Release the button within five seconds. The green and yellow lights flash in alternation.
- 5. Press the button again.

The parameters are reset and both lights blink three times. The yellow light then blinks regularly.

6. Switch the printer's main power off (or Roland-PrintServer).

Roland-PrintServer

ネットワーク設定ガイド

本書は、弊社のソフトウェア RIP をお使いになる方のためのネットワーク 設定ガイドです。プリンタに同梱のソフトウェア RIP をネットワーク接続 で使うには、本書の手順に従って設定してください。



R4-041224

このたびは本製品をお買い上げいただきまして、誠にありがとうございました。

- ・本製品を、正しく安全にご使用いただくため、また性能を十分理解していただくために、
 この取扱説明書を必ずお読みいただき、大切に保管してください。
- ・ご購入の際、「保証書」にお買い上げいただいた販売店の捺印、住所、購入年月日が記入されていることをお確かめの上、その保証書を大切に保管してください。
- ・本書の内容の一部または全部を、無断で複写・複製することはできません。
- ・本製品の仕様ならびに本書の内容は、予告なしに変更することがあります。
- ・本製品および本書の内容について、万一ご不審な点や誤り、記載漏れなど、お気づきの点 がありましたら、当社あてにご連絡ください。
- ・本製品の故障の有無にかかわらず、本製品をお使いいただいたことによって生じた直接ないし間接的な損害に対して、当社は一切の責任を負いません。
- ・本製品により作られた製作物に対して生じた、直接ないし間接的な損害に対して、当社は 一切の責任を負いません。

1. はじめに	
Roland-PrintServer について	
イーサネットケーブルの接続	
設定の概要	
2. Windows 2000/XP での設定	方法 4
Step 1: Windows 2000/XPの設	定4
Step 2: Roland-PrintServerの設	定5
Step 3: ソフトウェア RIP のポー	ト設定7
3. MacOS X での設定方法	
Step 1: Macintoshの設定	
Step 2: Roland-PrintServerの設	定
Step 3: ソフトウェア RIP のポー	ト設定 10
4. 付録	
Roland-PrintServer のリファレン	ス
困ったときには	
Roland-PrintServer のリセット方	法

Windows は、米国 Microsoft® Corporation の米国およびその他の国における登録商標または商標です。 Macintosh、Power Macintosh、Mac OS、漢字 Talk は、米国アップルコンピュータ社の商標です。 Adobe、Acrobat は、アドビシステムズ社の商標です。 その他、記載されている会社名、製品名は、各社の登録商標または商標です。

Copyright © 2002 Roland DG Corporation

http://www.rolanddg.co.jp/

Roland-PrintServer について

Roland-PrintServerは、弊社プリンタ等をイーサネットで接続しネットワーク環境での使用を可能にします。あらかじめプリンタ等に内蔵されているものと、外付け型の2タイプがあります。100 BASE-TX と10 BASE-T に対応しています(自動切り替え)。

* Roland-PrintServerで使用可能な機能は、組み合わせるプリンタに依存します。すべての機能が使えるわけではありません。

イーサネットケーブルの接続

イーサネットケーブルは、「カテゴリ5」のツイストペアケーブルをお使いください。ハブに接続する場合は、ストレートタイプを用います。



設定の概要

プリンタに同梱のソフトウェア RIP の場合、プロトコルは TCP/IP を用います。

セットアップの流れ



具体的なセットアップ手順は、以下を参照してください。

- ・Windows 2000/XP 🛛 🕼 P.4 「2. Windows 2000/XP での設定方法」を参照
- ・Macintosh(MacOSX) I P.8 「3. MacOSXでの設定方法」を参照

 ・Windows 95/98/Me/2000/XP

 ・Windows 15/98/Me/2000/XP
 Mac Tool

· MacOS X

・MacOS 9.x(ただし、機能拡張に CarbonLib バージョン 1.2.5 以上が必要)

ご注意! ここでは、ハブがひとつだけといった小規模ネットワークの場合を例に説明しています。 大きなネットワークの場合、不適切な設定はネットワーク全体に重大な影響を及ぼします。 ネットワーク管理者と十分打ち合わせのうえ設定値を決めてください。

Step 1: Windows 2000/XPの設定

- 1 「管理者」または「Administrators」グルー プのメンバーとして Windows にログオン します。
- Windows XP の場合: [スタート]-[コントロールパネル]をク リックします。[ネットワークとインター ネット接続]をクリックし、[ネットワーク 接続]をクリックします。

Windows 2000の場合: [スタート]-[設定]-[ネットワークとダ イヤルアップ接続]をクリックします。

- 3 (ローカルエリア接続)アイコンをダブルク リックします。(プロパティ)をクリックし ます。
- 4 〔インターネットプロトコル(TCP/IP)〕を 選択し、〔プロパティ〕をクリックします。 〔インターネットプロトコル(TCP/IP)〕の チェックボックスが空欄の場合は、クリッ クしてチェックを付けます。
- 5 〔次のIPアドレスを使う〕を選択します。次のように入力し、〔OK〕をクリックします。 〔IPアドレス〕: 192.168.0.XXX 〔サブネットマスク〕: 255.255.255.0
 - *「XXX」は1~254の任意の番号です。ただ し、他のパソコンや機器と重複しない番号に してください。
- 6 〔ローカルエリア接続〕のウインドウを閉じます。



↓ ローカル エリア接続のプロパティ ? 🗙
全般認証詳細設定
接続の方法
Intel(R) PRO/100 VE Network Connection
構成(
この接続は次の項目を使用します(型):
 ■ Microsoft ネットワーク用クライアント ■ Microsoft ネットワーク用ファイルとプリンタ共有
 図 2005 パケット スケジューラ マ インターネット プロトコル (TCP/IP)
1ンストール(型) 削除(皿) プロパティ(型)
「広送制御ブロトコル/インターネット ブロトコル。相互接続されたさまざまな ネットワーク間の通信を提供する、既定のワイド エリア ネットワーク プロトコ ルです。
□ 接続時に通知領域にインジケータを表示する(\\)
 OK キャンセル

インターネット プロトコル(TCP/IP)のプ	ロパティ				?:
全般					
ネットワークでこの機能がサポートされている。 きます。サポートされていない場合は、ネット てください。	場合は、IP i ワーク管理者	設定を 記述通り	自動的 Dな IP	こ取得す。 設定を問	5ことがで い合わせ
○ IP アドレスを自動的に取得する(Q)					
⑥ 次の IP アドレスを使う⑤:					
IP アドレスΦ:	192	168	0	101	
サブネット マスク(山):	255	255	255	0	
デフォルト ゲートウェイ (<u>D</u>):					
○ DNS サーバーのアドレスを自動的に耳) (得する(<u>日</u>)				
 ()次の DNS サーバーのアドレスを使う() () 	E):				
優先 DNS サーハー(E):					
代替 DNS サーバー(<u>A</u>):					
				iii faaligo	€W
	(C)K		キャンセル

Step 2: Roland-PrintServer の設定

- 1 Windowsに「Net Tool」をインストー ルします。 Roland-PrintServer CD-ROMの (NetTool) - [NetTool.exe]をダブル クリックします。インストーラが起動 しますので、メッセージに従って操作 してください。
- 2 プリンタの電源(メイン電源)をオンにします。外付け型の場合は、Roland-PrintServerの電源も入れます。
- 3 (スタート)メニューから、(すべてのプ ログラム) - (PRINTSERVER-Net Tool) - (PRINTSERVER-Net Tool) をクリックし、「Net Tool」を起動しま す(*次ページの注を参照)。 ネットワーク内で検索されたプリント サーバの一覧が表示されます。
- 4 目的の Roland-PrintServer を選択します。 初めての設定のとき、IP アドレスは「000.000.000.000」になっています。
- 5 (インストール)-(IPウィザード)をク リックします。 ここで手動設定か自動設定かを選択す る画面が表示されたら、(TCP/IPの手 動設定)を選択し、(次へ)をクリック します(初めて設定するときは表示され ません)。
- 6 次のように入力し、「次へ」をクリックします。 [IP アドレス]:192.168.0.XXX [サブネットマスク]:255.255.255.0
 - *「XXX」は2~254の任意の番号です。 ただし、Step 1での設定と重複しない番 号にしてください。
- 7 設定値を確認し、〔終了〕をクリックします。〔OK〕をクリックします。



🥸 PRINTSERVE	R-NetTool			
ファイル(E) フィルタ(!)	アクション(<u>A</u>) インス	ストール(1) 検索(<u>S</u>)	その他(E)	ヘルプ(円)
× × ×	- ii d (ାର୍ଷ୍ତ	1	
	IP アドレス	△ NetWare	名	種類
☆ 愛すべて	😨 000.000.000	D.000		Roland-Prir
	•		1	
 準備完了	J			1

弐 IP ウィザード: ICO4CEOD	?×
ブリントサーバの IP アドレスおよびサブネ が有効になっている場合、見つかったマル ゲートウェイを編集した	トットマスクを入力します。「マルチキャストルークをゲートウェイにする)」 チキャストルータのアドレスがゲートウェイとして使用されます。手動で たい場合は、このパラメータを悪かなしてください。
IP アドレス	[192] [168] 0] . [102
サブネットマスク	255 . 255 . 0
ゲートウェイ	000 . 000 . 000 . 000
	▼ マルチキャストルータをゲートウェイにする
· · · · · · · · · · · · · · · · · · ·	戻る 取り消し

(次ページへ続く)

8 一覧表のアイコンがプリンタに変わり、 設定した IP アドレスが表示されたら完 了です。「Net Tool」を終了してください。

アイコンが「ジン」のままの場合、IPア ドレス等が不適切です。設定をやりな おしてください。

👷 PRINTSERVE	R-NetTo	ool					_
ファイル(E) フィルタ() アクション	(<u>A</u>) インス	Ւ−ルΦ	検索(<u>S</u>)	その他(<u>E</u>)	ヘルプ(円)	
* * <i>?</i> :		60	đ	ଙ୍କ C			
	I	P アドレス		NetWare :	8	種類	
⊡- 愛すべて	🔮 1	92.168.000.1	02	IC04CE0D		Roland-P	rintSer∖
<u> </u>					J		
準備完了							1

(*注)

Windows XP SP2 以上の場合、(Windows セキュリティの重要な警告) ダイアログが表示されることがあります。このときは、(ブロックを解除する)をクリックしてください。NetToolをブロックすると、正常に動作しないことがあります。



Windows XP SP2 以上で (Windows ファイアウォール)を (例外を許可しない) に設定すると、 NetTool が正常に動作しないことがあります。 Windows XP SP1 で [インターネット接続ファイアウォール]を有効にすると、NetTool が正常に 動作しないことがあります。

(?)ポイント ネットワーク管理者の方へ

前ページの手順5で〔アクション〕-〔プロバティ〕をクリックすると、管理者向けの詳細設定画面が 表示されます。

* 使用可能な機能は、組み合わせるプリンタに依存します。すべての機能が使えるわけではありません。

Step 3: ソフトウェア RIP のポート設定

ソフトウェアRIPを設定します。出力先には、Step 2で設定したRoland-PrintServerのIPアドレスを 指定します。設定手順については、ソフトウェアRIPの説明書を参照してください。 ご注意! ここでは、ハブがひとつだけといった小規模ネットワークの場合を例に説明しています。 大きなネットワークの場合、不適切な設定はネットワーク全体に重大な影響を及ぼします。 ネットワーク管理者と十分打ち合わせのうえ設定値を決めてください。

Step 1: Macintosh の設定

(🕈) ポイント

MacOS X に複数のユーザが登録してあるときは、管理者権限を持つユーザ名でログインしてください。

- アップルメニューから〔システム環境設定〕
 を開きます。〔ネットワーク〕をクリックします。
- 2 〔表示〕でEthernet(〔内蔵Ethernet〕など〕) を選択します。〔TCP/IP〕 タブをクリック します。
- 3 〔設定〕で〔手入力〕を選択します。次のように入力し、〔今すぐ適用〕をクリックします。 〔IP アドレス〕: 192.168.0.XXX

〔サブネットマスク〕: 255.255.255.0

- *「XXX」は1~254の任意の番号です。ただ し、他のパソコンや機器と重複しない番号に してください。
- **4**〔システム環境設定〕を終了します。

	4. V I. 4	,_,
	場所:〔自動	\$
示: 内蔵 Etherne	t	•
	TCP/IP PPPoE A	opleTalk プロキシ
設定	手入力	*
		ドメインネームサーバ (オフション)
IP アドレス	192.168.0.101	
サブネットマスク	255.255.255.0	
ルータ		検索ドメイン (オプション)
Ethernet アドレス	. : 00:30:65:c7:7a:ce	例:apple.co.jp. earthlink.net

Step 2: Roland-PrintServer の設定

- プリンタの電源 メイン電源 をオンにします。外付け型の場合は、Roland-PrintServer の電源も入れます。
- 2 Roland-PrintServer CD-ROMの [MacTool Carbon]-[PRINTSERVER-MacTool]を クリックし、「MacTool」を起動します。
- 3 [Start]をクリックします。 ネットワーク内で検索されたプリント サーバの一覧が表示されます。
- 4 目的の Roland-PrintServer を選択します。 初めての設定のとき、IP アドレスは青色で「000.000.000.000」と表示されています。
- 5 [Tools] [IP Wizard] をクリックし、 次のように入力します。 [IP アドレス]: 192.168.0.XXX [サプネットマスク]: 255.255.255.0
 - *「XXX」は2~254の任意の番号です。 ただし、Step 1での設定と重複しない番 号にしてください。
- 6 [Set]をクリックし、「青信号」の表示になることを確認します。[Done]をクリックします。
 「赤信号」になったときはIPアドレスが不適切です。入力し直してください。
- 7「Mac Tool」をいちど終了し、ふたたび 起動します。[Start]をクリックします。 設定した IP アドレスが黒色で表示され ていたら完了です。「Mac Tool」を終了 してください。

Network Scout				
Scanning Network				
Search:				
○ ATalk/NBP ○ Both				
(ATalk takes 1s/Zone under MacX)				
Cancel Start				





000	MacTool		
Name	Address	Version	C
☞ 🛱 192.168.0.0 (001)			1
	192.168.000.102	9.4.4	Re
Info: Objects:1 ATalk:8		1	

(?) ポイント ネットワーク管理者の方へ

上記の手順 5 で [PServer Table] - [Configure PrintServer] をクリックすると、管理者向けの詳細 設定画面が表示されます。

* 使用可能な機能は、組み合わせるプリンタに依存します。すべての機能が使えるわけではありません。

Step 3: ソフトウェア RIP のポート設定

ソフトウェア RIP を設定します。出力先には、Step 2 で設定した Roland-PrintServer の IP アドレスを 指定します。設定手順については、ソフトウェア RIP の説明書を参照してください。

Roland-PrintServerのリファレンス

Roland-PrintServerの機能詳細については、Roland-PrintServer CD-ROM に収録の「Roland-PrintServerユーザーマニュアル」を参照してください。電子マニュアル(PDF形式)になっており、ご覧 いただくには Adobe Acrobat Reader をインストールしてください。

* Roland-PrintServer で使用可能な機能は、組み合わせるプリンタに依存します。すべての機能が使えるわけ ではありません。

「Roland-PrintServer ユーザーマニュアル」

収録場所 [Manual] - [Japanese] - [User.pdf]

Adobe Acrobat Reader インストーラ

Windows版の収録場所 [Acrobat] - [Japanese] - [ar405jpn.exe]

(Windows 95 以上で動作します)

Macintosh版の収録場所 〔Acrobat] - 〔Japanese〕 - 〔Reader Installer〕 (漢字 Talk 7.5 ~ MacOS 9.x(Power Macintosh 以上) MacOS X Classic 環境で動作します)

困ったときには

ネットワーク経由で印刷できない

Roland-PrintServer の緑ランプが2つとも点灯しているか確認する

* 内蔵タイプの場合、緑ランプはイーサネットコネクタの近くにあります。

片方の緑ランプが消えている場合、プリンタの電源(メイン電源)またはRoland-PrintServerの電源をいったん切ります。ふたたび電源を入れ、緑ランプを再度確認します。

電源をいったん切っても緑ランプの片方が消えたままの場合、イーサネットケーブルの接続が適切であ りません。きちんと奥まで差してあるか確認します。また、ケーブルを新しいものと取り替えてみま す。クロス・ストレートが正しいかも確認します(ハブに接続する場合は、ストレートケーブルを用い ます)。

一方の緑ランプが点滅している場合、Roland-PrintServerの設定が適切でありません。IPアドレス等の設定をもう一度してみてください。回復しない場合は、Roland-PrintServerをリセットし、再度設定してください。リセットの方法については、次ページを参照してください。

緑ランプが2つとも点灯しているが印刷できない

IPアドレス等の設定が適切か確認してください。パソコン側とRoland-PrintServer側の両方が適切に 設定されている必要があります。IPアドレスが重複していないか、入力ミスがなかったかを確認しな がら、再度設定をしてみてください。

ソフトウェア RIP のポートの設定を確認してください。ソフトウェア RIP には、Roland-PrintServer に付けた IP アドレスを指定します。

ネットワークのルーティングが適切か確認してください。パソコンとRoland-PrintServerを同じハプ に接続してみるか、クロスケープルで直接接続します。これで印刷できるようなら、ネットワーク側の 問題である可能性があります。 Roland-PrintServer に付けた IP アドレスがわからなくなった

本書の設定手順と同様にして、Net Tool または Mac Tool で Roland-PrintServer を検索してください。 設定した IP アドレスが表示されます。

Roland-PrintServer が見えなくなった

Net ToolまたはMac Toolで検索しても表示されない場合、Roland-PrintServerに不適切な設定をして しまった可能性があります。Roland-PrintServerをリセットし、再度IPアドレス等の設定してください。 リセットの方法については、後述を参照してください。

Roland-PrintServer のリセット方法

次の操作ですべての設定が初期化され、工場出荷時に戻ります。

- 1. プリンタのメイン電源(または Roland-PrintServer の電源)を切ります。
- 2. 小さな青いボタンを押したままにします。

*内蔵タイプの場合、青ボタンはEthernetコネクタの近くにあります。

- 3. プリンタのメイン電源(または Roland-PrintServer の電源)を入れます。 緑と黄色のランプが早い点滅を繰り返します。
- 5秒以内にボタンを離します。
 緑と黄色のランプが交互に点滅を繰り返します。
- 再びボタンを押します。
 パラメータがリセットされ、ランプがともに3回点滅します。黄色のランプはその後も規則的に点滅します。
- 6. プリンタのメイン電源(または Roland-PrintServer の電源)を切ります。