


TU4-64 TUC-4 & TU4-54 TU4-30

User's Manual

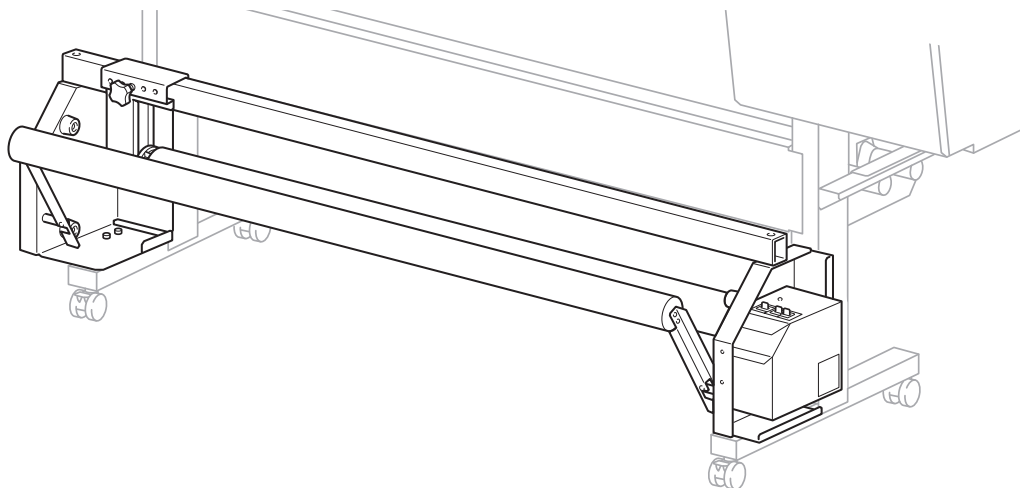

Thank you very much for purchasing this product.

- To ensure correct and safe usage with a full understanding of this product's performance, please be sure to read through this manual completely.
- Unauthorized copying or transferal, in whole or in part, of this manual is prohibited.
- The specifications of this product and the contents of this operation manual are subject to change without notice.
- The operation manual and the product have been prepared and tested as much as possible. If you find any misprints or errors, please inform us.
- Roland DG Corporation assumes no responsibility for any direct or indirect loss or damage that may occur through use of this product, regardless of any failure to perform on the part of this product.
- Roland DG Corporation assumes no responsibility for any direct or indirect loss or damage that may occur with respect to any article made using this product.

FA03359
R8-230320

<https://www.rolanddg.com/>
Copyright © 2019 - 2023 Roland DG Corporation

Contents

Introduction	2
About This Machine	3
Features of This Machine	3
Main Compatible Models	3
Selecting the Take-up Method	4
Part Names and Functions	5
Checking the Package Contents	6
Assembly and Installation	7
Read This before Starting Work	8
Assembly and Installation	9
Step 1: Assembling the Take-up Unit	9
Step 2: Fixing the Assembled Take-up Unit to the Printer Stand	12
Step 3: Attaching the Cable Clamps	19
Step 4: Connect the cables.	20
Operation	22
Notes to Follow	23
Do Not Perform Operations That Pull the Media with Excessive Force	23
Turn Off the Automatic Cut-off Function for the Media	23
Notes to Follow When "TU" Is Selected	23
Notes to Follow When "TU3" Is Selected	23
Length Setting When "TU2" Is Selected	24
About Test Print	25
About the Paper Tube	26
How to Load Media	27
Step 1: Loading the Paper Tube	27
Step 2: Passing the Media Through the Printer	29
Step 3: Securing the Media on the Paper Tube (Core)	30
Step 4: Taking Up the Media	32
To Take Up Media Manually	34
How to Remove Taken-up Media	35
What to Do If	36
The Take-up Unit Doesn't Take Up Media	37
Are the power cord and AC adapter properly connected?	37
Is the AUTO switch set to [OFF]?	37
Is the AUTO switch direction properly set?	37
Is the media automatic cut-off function active?	37
Is the paper tube loaded properly?	37
Is the paper tube used the one that is included?	37
Is the paper tube bent?	37
Have the media take-up direction and the AUTO switch of the TUC been set correctly?	37
Media Take-up Is Not Straight	39
Is the media loaded correctly?	39
Appendix	40
Locations of the Power Rating and Serial Number Labels	41
Specifications	42

Introduction

About This Machine	3
Features of This Machine	3
Main Compatible Models	3
Selecting the Take-up Method	4
Part Names and Functions.....	5
Checking the Package Contents	6

About This Machine

Features of This Machine

- This is a take-up unit for Roland DG Corporation large format printers.
- It enables automatic take-up of the media during printing. This allows for lengthy printing and unattended operation at night to be accomplished efficiently.
- The maximum weight for usable media is 40 kg (88.18 lb.). Stable take-up is possible even for heavy media (if the printer's usable media weight is less than 40 kg (88.18 lb.), media weighing more than this cannot be used).
- The amount of tension when taking up can be selected depending on the properties of the media. With more resilient media such as PVC, you can take up with a little slack. This will reduce the feed difference between the left and right sides of the media. With less resilient media such as tarpaulin, you can take up with slightly stronger tension.

Main Compatible Models

- TrueVIS series (VF2-640, VG2-640/540, SG2-640/540/300, VG-640/540, SG-540/300, MG-640/300, etc.)
- VersaUV series (LEC2-300 and LEC2-640/330)
- DGXPRESS series (UG-641)

Selecting the Take-up Method

Installing this machine will cause the printer menu list, etc. to change as follows.

It is possible to select the take-up method ("TU", "TU2", or "TU3") on the "SETUP SHEET" screen.

SETUP SHEET
◀ TU2


Select the take-up method to match the output method.

Take-up method	Output method	Description
"TU"	Printing only * However, the case in which the media is pulled back after printing in order to print on the media again is excluded.	Take-up is performed at the same time as output. The work can be completed in less time than is required with the "TU2" setting. However, this setting causes an error to occur during output performed with cutting operations, so this setting cannot be used in this situation. * When pulling back the media after printing in order to print on the media again, select the "TU2" setting.
"TU2"*1	Cutting only, printing and cutting, cropping and cutting * However, the case in which the media is pulled back after printing in order to print on the media again is included.	No take-up is performed until the output of the piece of data is finished. When the output is finished, the length of media that was output is pulled back and is then taken up. The work time is longer than that for the "TU" setting, but this setting can be used to perform take-up even for output performed with cutting operations.
"TU3"*2	Printing only	Use this method when using media (such as soft packaging) that is not transported by pulling it back. The cutting operation and media cut-off are not possible.

*1 This is not displayed if you are using the VF2-640.

*2 This is only displayed if you are using the LEC2-330, MG-300, or TB-30.

Part Names and Functions

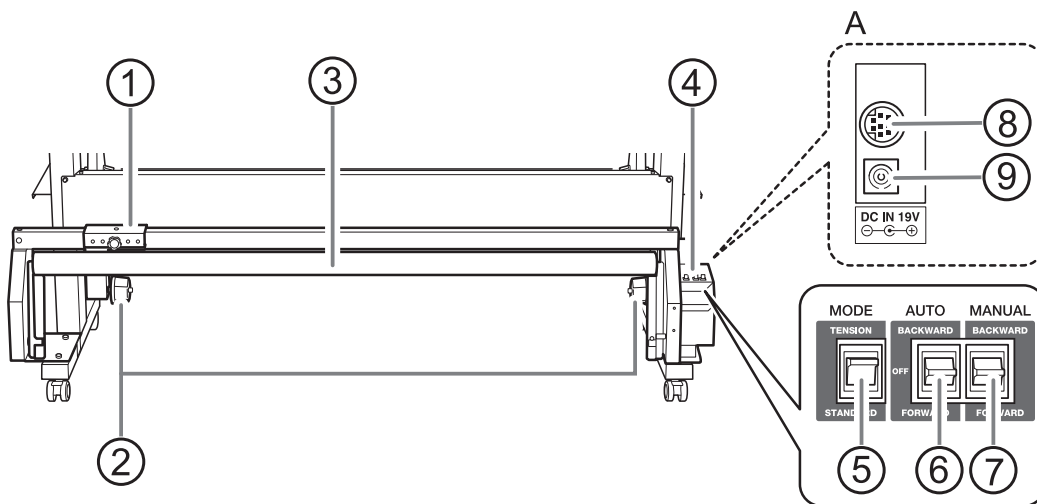

A: Back of the control box

No.	Name	Function overview
①	Arm	This is used when securing the loaded paper tube.
②	End caps	These are used when loading the paper tube for take-up.
③	Dancer roller	This keeps the media tension constant.
④	Control box	This controls the media take-up.
⑤	MODE switch	Select either [STANDARD] to loosely take up the media or [TENSION] to stretch the media while taking it up.
⑥	AUTO switch	This changes the direction of rotation when automatically taking up while printing.
⑦	MANUAL switch	Use this when you want to manually operate the take-up unit.
⑧	Printer connector	This connects the included printer connection cable.
⑨	AC adapter jack	This connects the included dedicated AC adapter.

About the Notation Used in This Manual









In this document, the keys and lights on the printer unit operation panel are indicated as shown below.

Part	Name	Details	Notation in this manual
	Cursor keys	Use these to select settings for menu items, to move the media, and for other such operations.	[◀][▼][▲][▶]
	SETUP light	The light turns on when media has been loaded correctly.	[SETUP]
	ENTER key	Use this for such tasks as enabling setting values.	[ENTER]
	BASE POINT light	The light turns on when the base point (the output-start location) has been set.	[BASE]




Checking the Package Contents

The following enclosed items are divided into two packages. Make sure they are all present and accounted for.

        Control Box (TUC-4)

			
Arm (1)	Slider stay (left) (1)	Slider stay (right) (1)	Mounting bracket A (2)
			
Mounting bracket B (2)	Mounting bracket C (1)	Mounting bracket D (1)	Mounting bracket E (2)
			
Hexagonal wrench (small) (1)	Bolt with washer (small) (6)	Bolt (small) (6)	Printer connection cable (1)
			
Cable clamp (small) (2), (large) (1)	AC adapter (1) Power cord (1)		

   Rails & Accessories (TU4-64/54/30)

			
Dancer roller (1)	Rail slider (1)	Paper tube (1)	Hexagonal wrench (large) (1)
			
Bolt with washer (large) (14)	Safety Precautions (1)	Washer (3)	Bolt (large) (4)

Assembly and Installation

- Read This before Starting Work 8
- Assembly and Installation 9
 - Step 1: Assembling the Take-up Unit 9
 - Step 2: Fixing the Assembled Take-up Unit to the Printer Stand 12
 - Step 3: Attaching the Cable Clamps 19
 - Step 4: Connect the cables.20

Read This before Starting Work

- Perform work after installing the printer to be used in the desired location.
- Perform work in a level, stable, and flat location.
- Performing work near the printer to which this machine will be attached is recommended.

WARNING

Never install this machine outside or in any location where exposure to water or high humidity may occur.

Current leakage may cause electrical shock or fire.

WARNING

Never install the machine close to any flammable object or in a gas-filled location.

Combustion or explosion could occur.

WARNING

Install the machine in a clean, brightly lit location.

Working in a location that is dark or cluttered may lead to an accident, such as becoming caught in the machine as the result of an inadvertent stumble.

WARNING

Position the machine so that the power plug is within immediate reach at all times.

This is to enable quick disconnection of the power plug in the event of an emergency. Install the machine next to an electrical outlet. Also, provide enough empty space to allow immediate access to the electrical outlet.

Assembly and Installation

⚠ CAUTION

Unloading and emplacement are operations that must be performed by 2 persons or more.

Tasks that require undue effort when performed by a small number of persons may result in physical injury. Also, if dropped, such items may cause injury.


MEMO

The VG-640 is used for the figures depicting common operations.


Step 1: Assembling the Take-up Unit

Procedure

1. Attach the arm (B) to the rail slider (A) and fix it with the arm retaining screw (C).
Orient the rail slider so its riveted side (D) is on the side opposite the arm retaining screw.

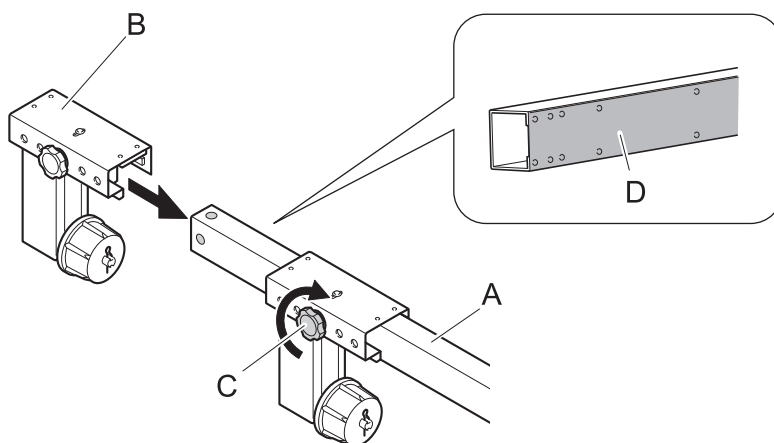


2. Place the right slider stay (A) and the left slider stay (B) apart from each other with enough space between them to fit the machine. (*1)

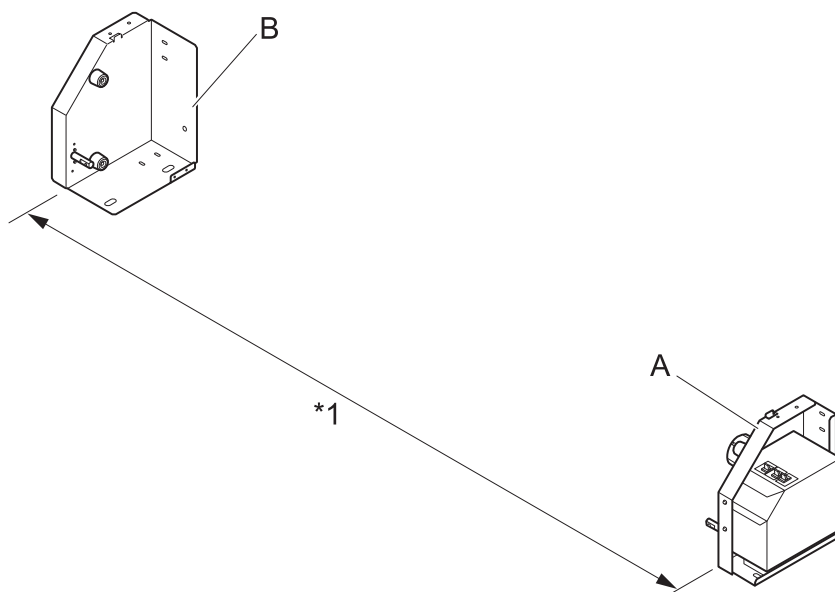


*1	64-inch model: Approx. 1.9 m (74.80 in.)
	54-inch model: Approx. 1.7 m (66.93 in.)
	30-inch model: Approx. 1.0 m (39.37 in.)

3. Fix the rail slider in place on top of the right and left slider stays.


- (1) Align the rail slider slit (A) with the left slider stay protrusion (B), and then place the rail slider on top of the left and right slider stays.

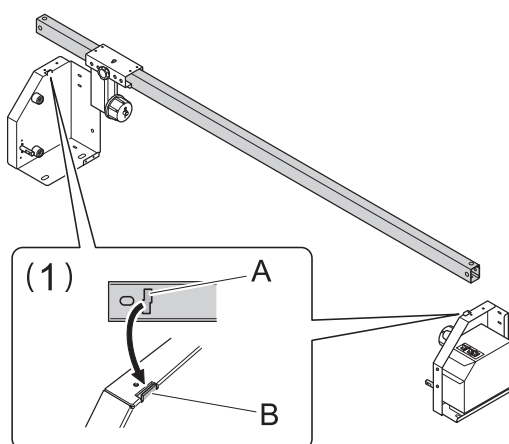

- (2) Align the edges of the rail slider with the edges of the left and right slider stays.
- (3) Fix the rail slider in place using the bolts with washers (large).

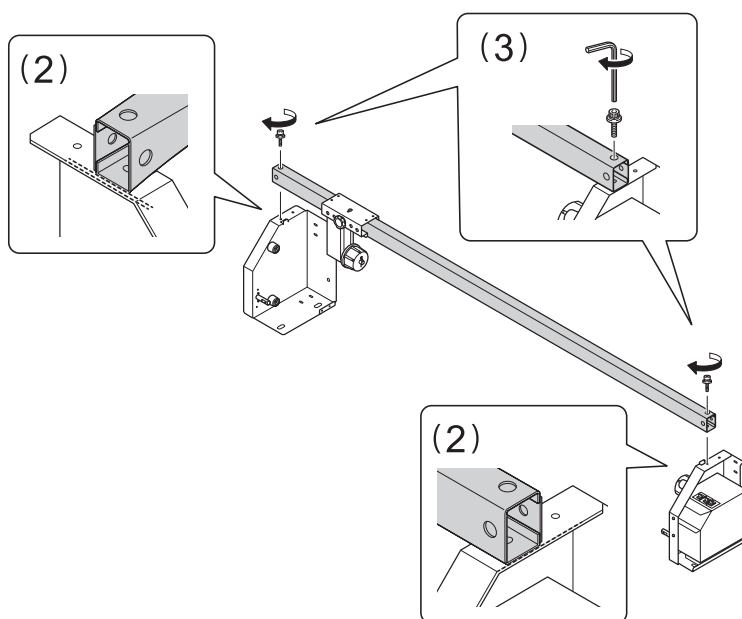


4. Install mounting bracket A (A) and fully tighten the bolts with washers (large) connecting the rail slider and the left and right slider stays.

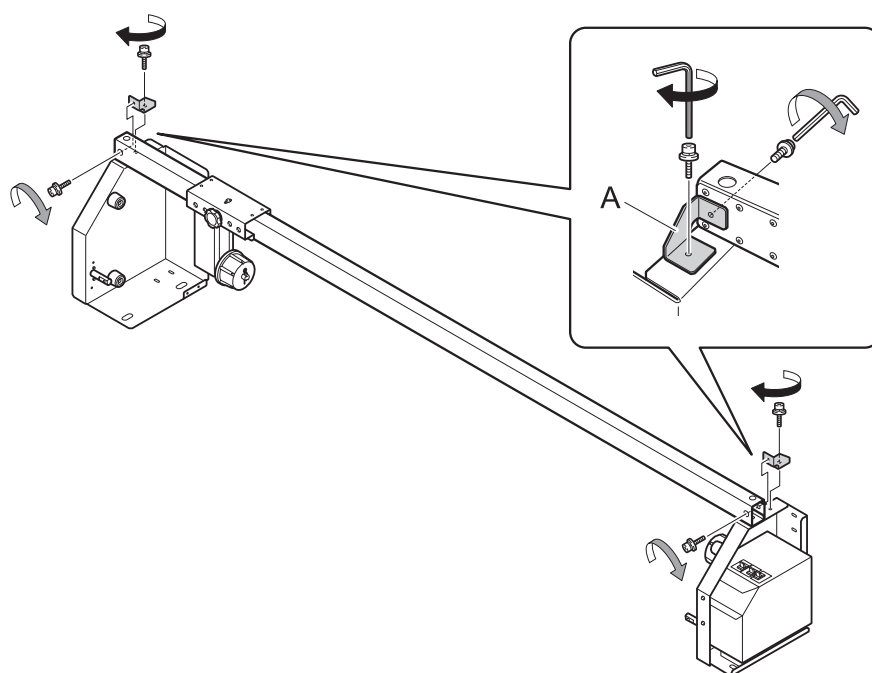


Step 2: Fixing the Assembled Take-up Unit to the Printer Stand

Procedure


1. Make sure the printer stand screws are not loose.
If they are loose, tighten them once again.
2. Place the take-up unit on the stand.
 - When using the VG-640/540, SG-540/300, LEC2-300, LEC2-640/330, MG-640/300, UG-641

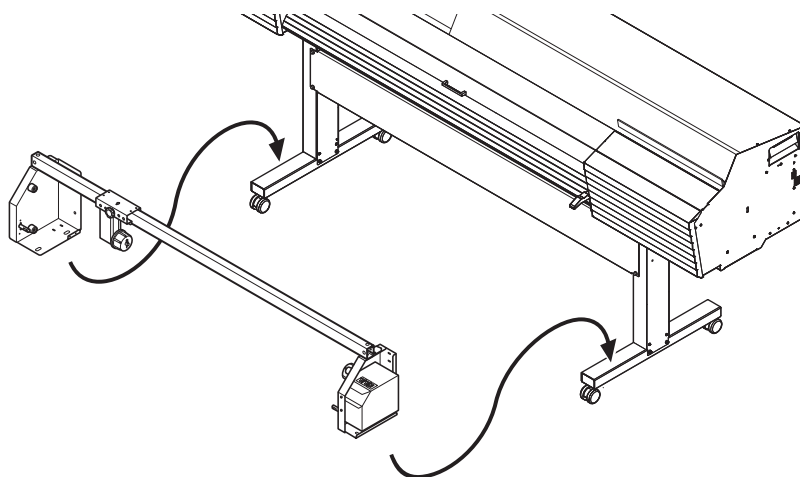

- When using the VF2-640, VG2-640/540, SG2-640/540/300
 - a. Insert a bolt with washer (large) from the bottom into the hole on the right stand leg.
There are two holes in the stand leg, but only insert the bolt in the hole on the stand post side.

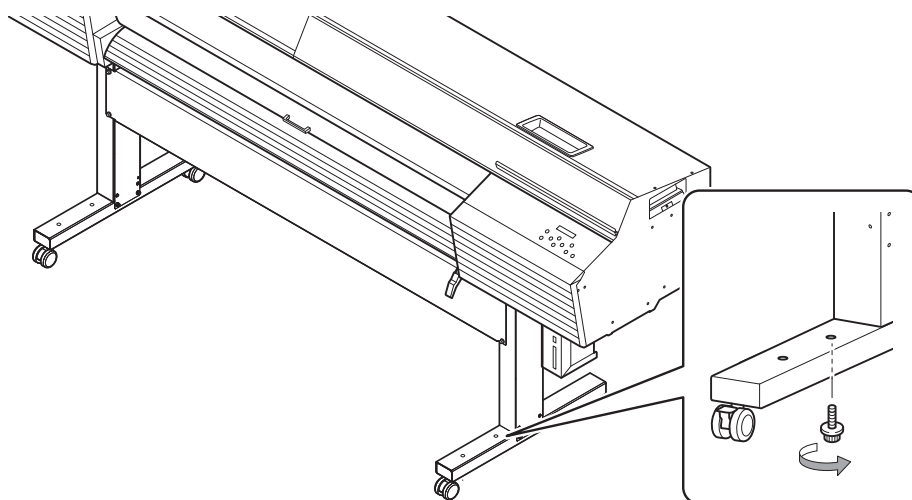


- b. Place the take-up unit on the stand.

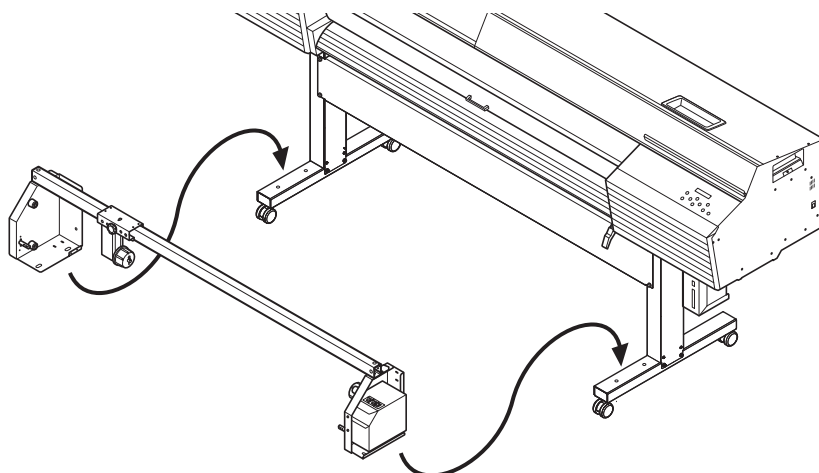


c. Note the following points and set the fixing location for the take-up unit.

- Align the bolt with washer (large) inserted in step (1) with the hole in the right slider stay.

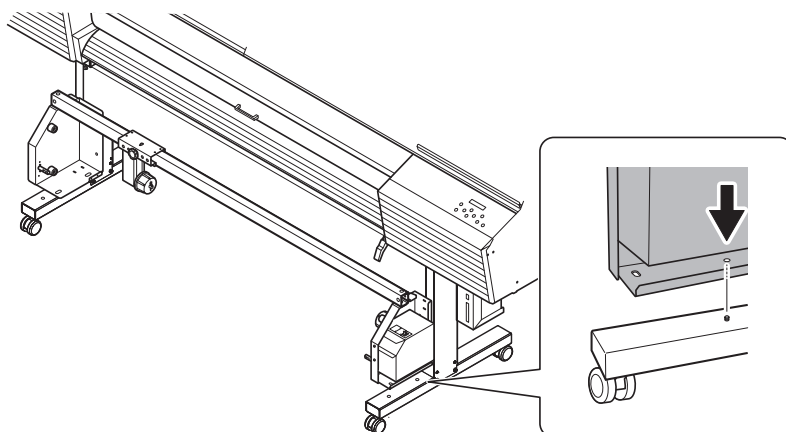


MEMO

If it is difficult to align the bolt with washer (large) with the hole in the right slider stay, adjust the right slider stay (A) and the stand leg to positions where their inside faces are pointed at each other. This brings the hole in the right slider stay (B) close to the position of the bolt with washer (large) and thereby makes it easy to align these parts.

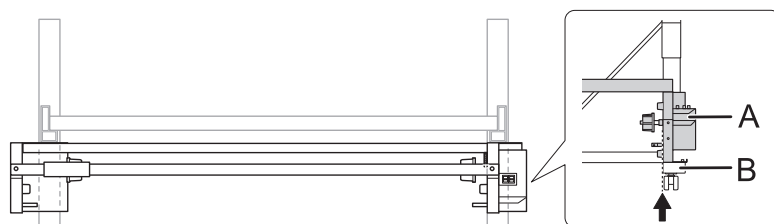


- Place the left and right slider stays approximately 10 mm (0.39 in.) (C) away from the stand legs.

Printer side

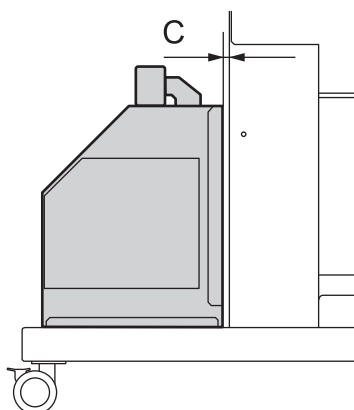


3. Fix the left and right slider stays to the stand legs.

- When using the VG-640/540, SG-540/300, LEC2-300, LEC2-640/330, MG-640/300, UG-641

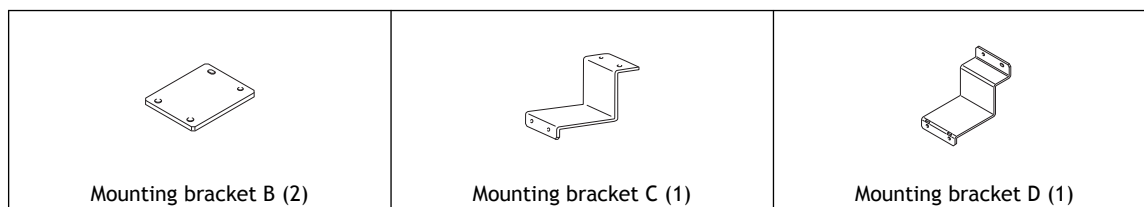


- (1) While pushing mounting bracket C against the side of the stand leg, temporarily tighten the bolts with washers (small).

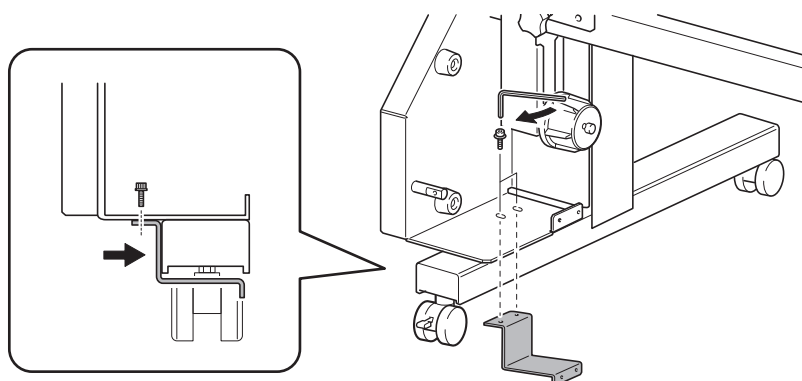

- (2) Use the hexagonal wrench (small) to temporarily tighten the bolts fixing the two instances of mounting bracket B to the left and right slider stays.


MEMO

Orient the two instances of mounting bracket B so their elongated holes are in the positions shown in the figures.

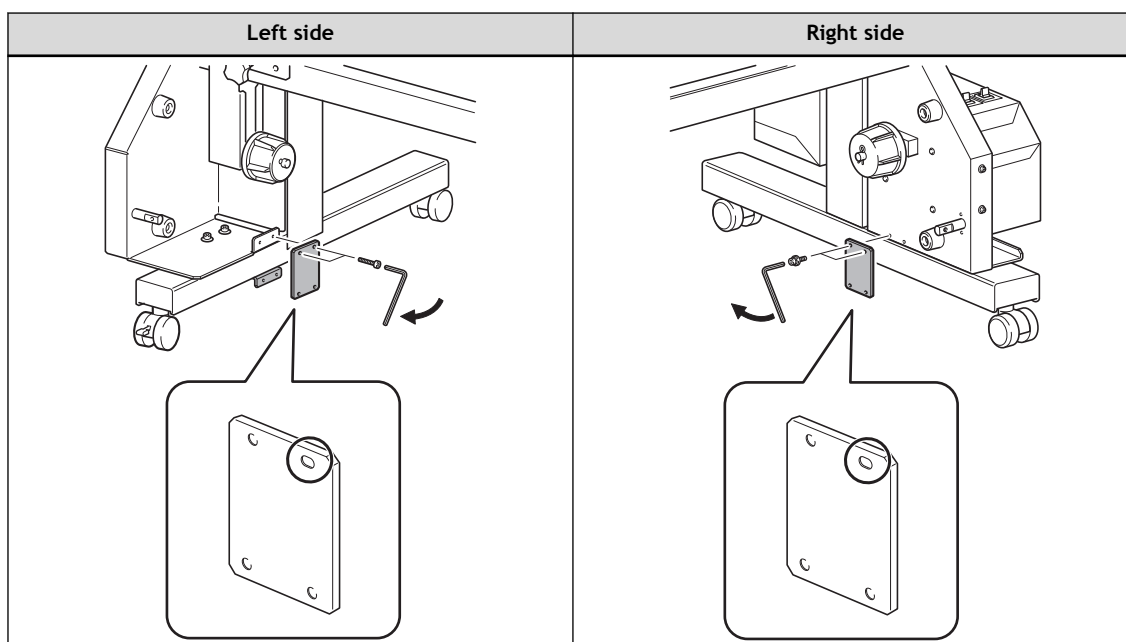


- (3) Push the take-up unit right next to the stand.



Push the left and right slider stays (A) against the stand legs, and then push the two instances of mounting bracket B (B) against the stand legs (C).

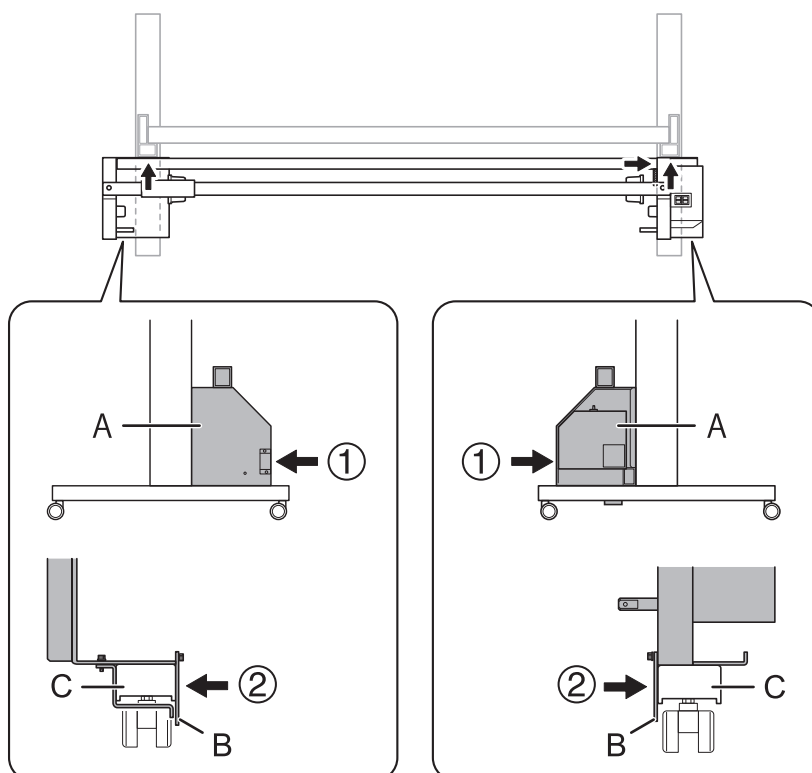


- (4) While pushing mounting bracket C (A) against the stand leg, use the hexagonal wrench (small) to fully tighten the bolts with washers (small).

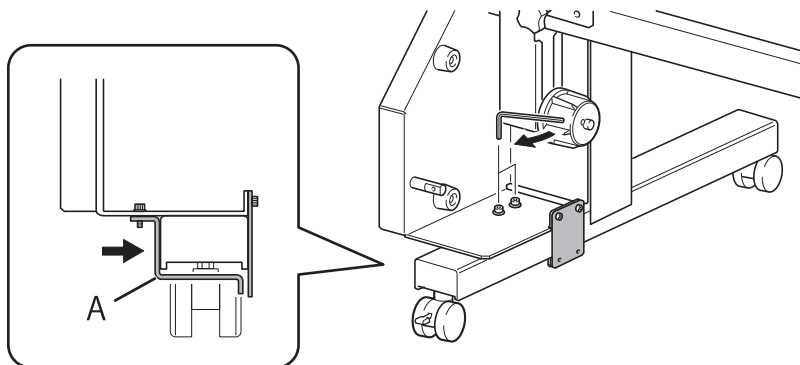


- (5) Use the hexagonal wrench (small) to temporarily tighten the bolts fixing mounting bracket C (left side) to one instance of mounting bracket B and mounting bracket D (right side) to the other instance of mounting bracket B.

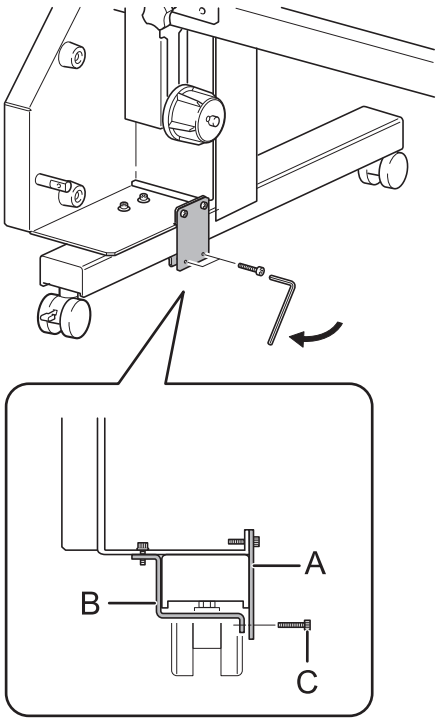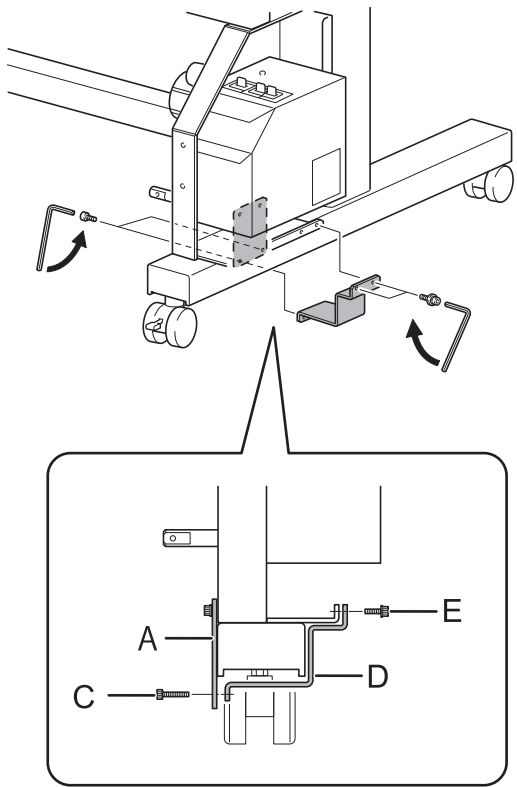Left side	Right side
Attach mounting bracket C (B) to mounting bracket B (A) with bolts (small). 	Attach mounting bracket D (D) to mounting bracket B (A) with bolts (small) (C) and bolts with washers (E). 

- (6) While pushing the slider stays against the stand legs, fully tighten the bolts holding them in place.

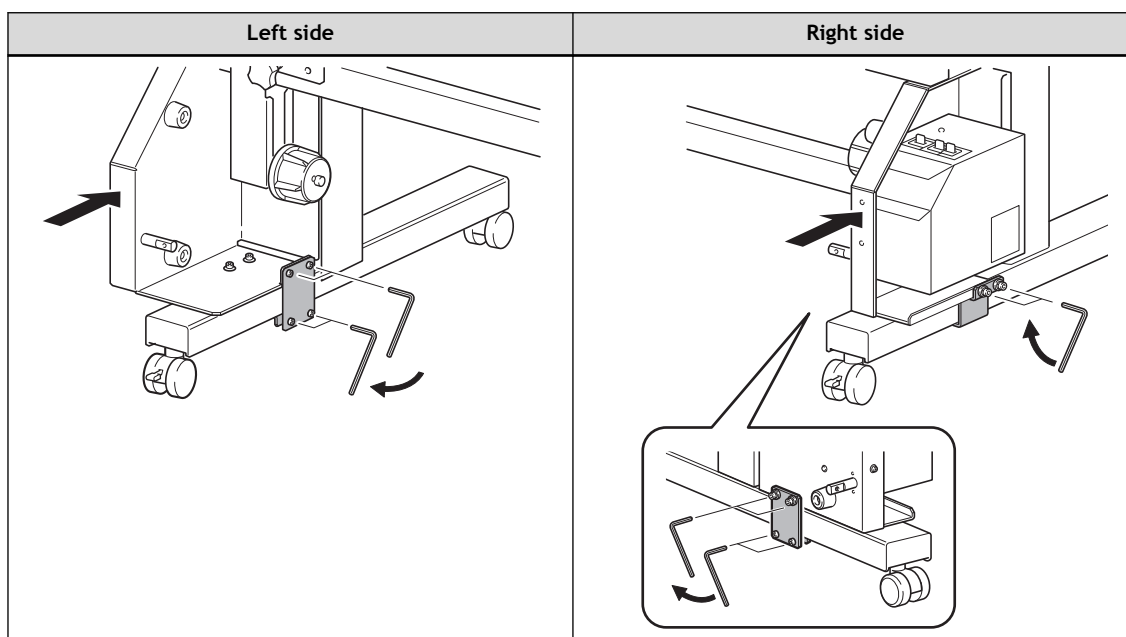


- When using the VF2-640, VG2-640/540, SG2-640/540/300

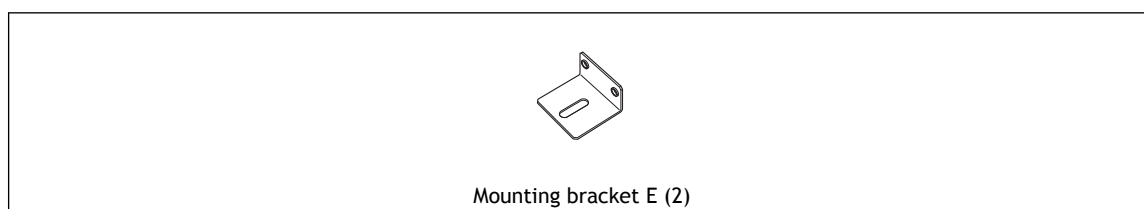

- (1) Use the hexagonal wrench (large) to temporarily tighten the bolts with washers (large) and additional washers in order, right slider stay followed by left slider stay.

Tighten one bolt on the right side of the right slider stay and two bolts on the left side of the left slider stay.

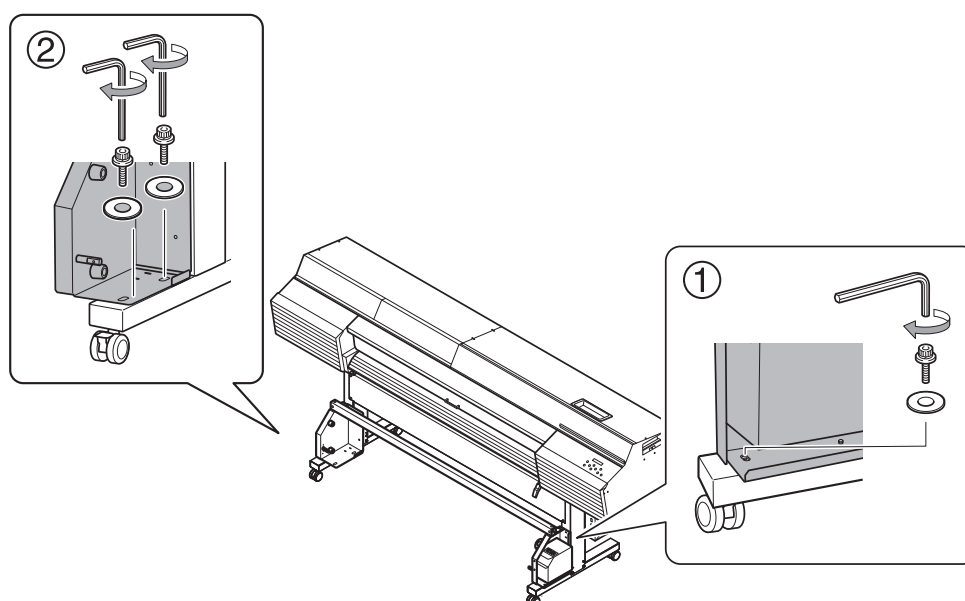


MEMO

Before you proceed to the next operations, the machine must be adjusted by a suitably qualified worker. Leave this work to the suitably qualified worker.

(2) Fully tighten the bolts in order, right slider stay followed by left slider stay.

(3) Fix the take-up unit to the stand using mounting bracket E.

Use the hexagonal wrench (large) to insert the bolts with washers (large) (A) and the bolts (large) (B).

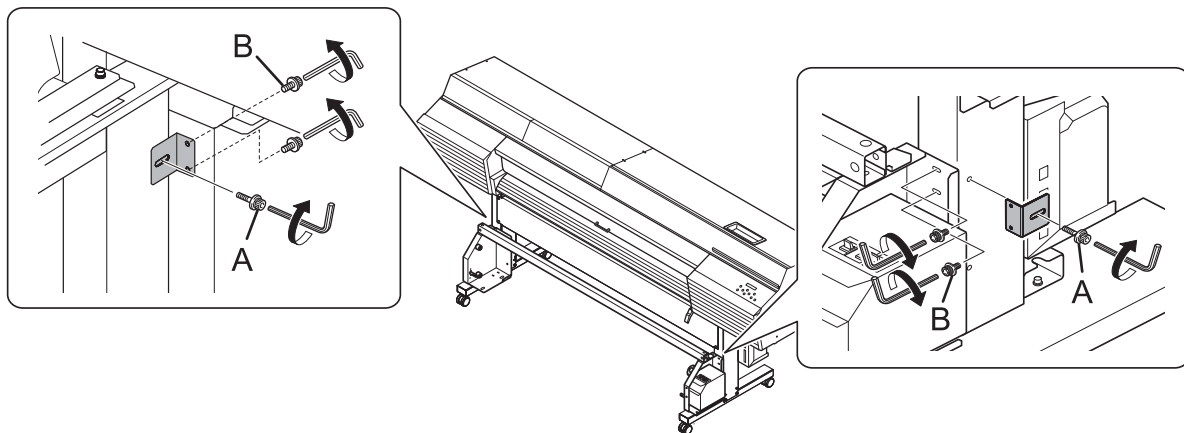


MEMO

When fixing the take-up unit to the left stand, perform the work from the rear of the printer.

4. Install the dancer roller.

(1) Insert the left and right arms of the dancer roller into the left and right shafts and align the positions of their holes.


(2) Temporarily tighten the bolts with washers (large) in order, right slider stay followed by left slider stay.

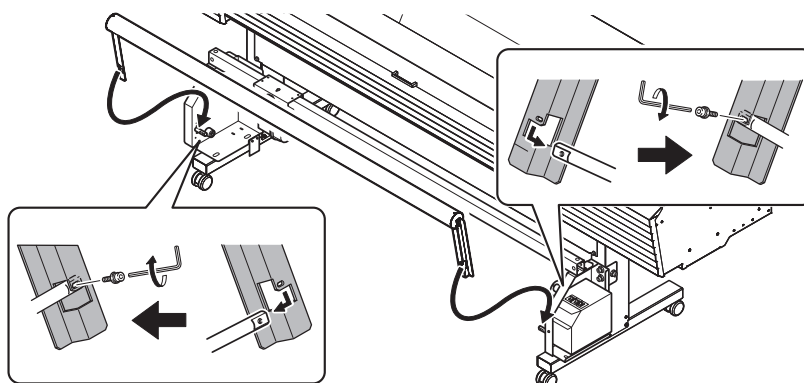


(3) Fully tighten the bolts in order, right slider stay followed by left slider stay.

Step 3: Attaching the Cable Clamps

- When using the VF2-640, VG2-640/540, SG2-640/540/300, LEC2-300, VG-640/540, SG-540/300
Attach the large (A) and small (B) cable clamps to the positions shown in the figure.

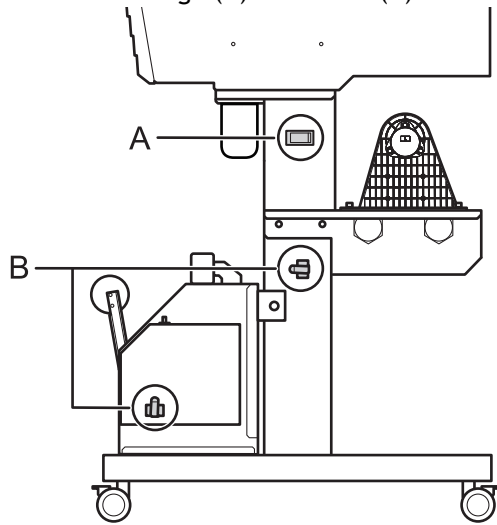

- When using the LEC2-640/330, MG-640/300, UG-641
 1. Attach the large (A) and small (B) cable clamps included with the TUC-4. (There are three cable clamps in total.)
 2. Attach the cable clamps (C) included with the printer. (There are two cable clamps in total.)

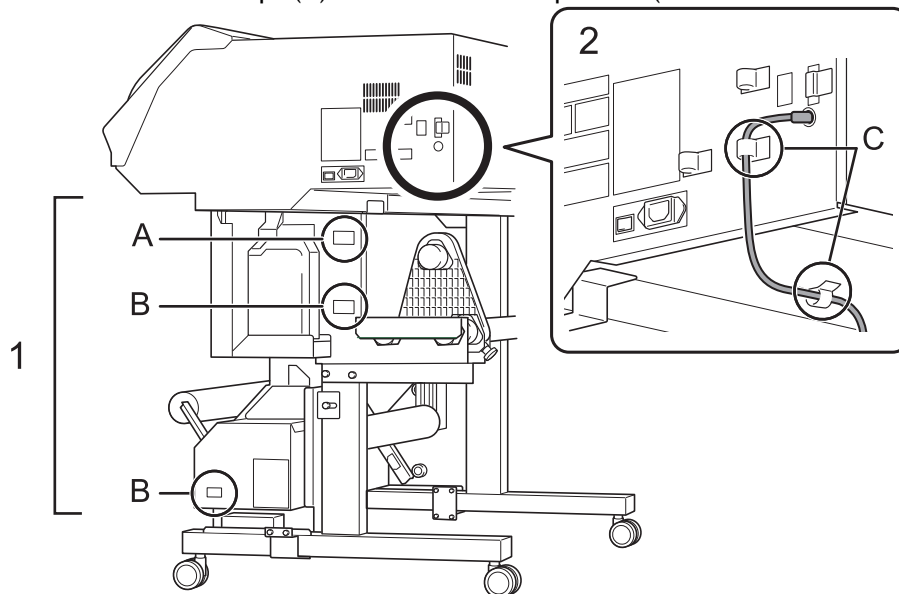

Step 4: Connect the cables.

⚠ WARNING

Connect to an electrical outlet that complies with this machine's ratings (for voltage, frequency, and current).

Incorrect voltage or insufficient current may cause fire or electrical shock.

⚠ WARNING

Do not use with any electrical power supply that does not meet the ratings displayed on the AC adapter.

Use with any other power supply may lead to fire or electrical shock.

⚠ WARNING

Never use any AC adapter or power cord other than those included with the machine.

Use with any other power supply may lead to fire or electrical shock.


Procedure

1. Insert the printer connection cable into the printer connector on the printer unit.


On the printer unit, the printer connector is located:

- At the bottom of the front panel of the VF2-640, VG2-640/540, VG-640/540.*¹
- At the bottom of the front panel of the SG2-640/540/300, SG-540/300.
- On the rear panel of the LEC2-300.
- On the side panel of the LEC2-640/330, MG-640/300, UG-641.

TAKE UP

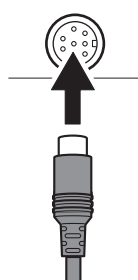

2. Insert the printer connection cable into the printer connector on the control box.

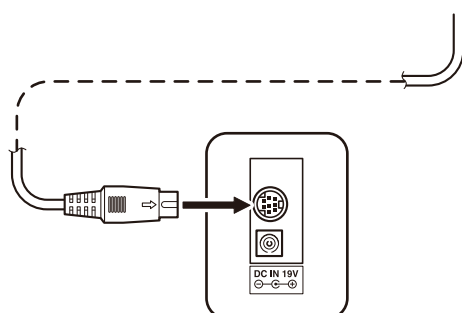

*1 If there are three connectors, connect the cable to the one labeled "TAKE UP."


3. Connect the AC adapter (A) to the AC adapter jack (B) of the control box.
Bundle the excess cable with a cable clamp (large).

MEMO

Place the AC adapter inside the right slider stay.

4. Connect the power cord to the AC adapter, and then connect the power cord to an electrical outlet.
Fix the power cord in place with a cable clamp (small).

Printer side

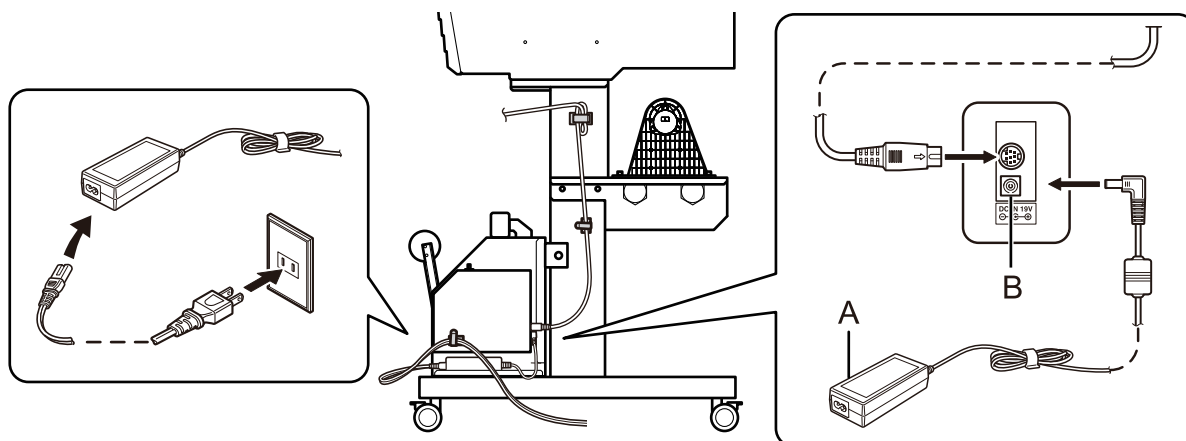

Operation

Notes to Follow	23
Do Not Perform Operations That Pull the Media with Excessive Force	23
Turn Off the Automatic Cut-off Function for the Media.....	23
Notes to Follow When "TU" Is Selected	23
Notes to Follow When "TU3" Is Selected.....	23
Length Setting When "TU2" Is Selected.....	24
About Test Print.....	25
About the Paper Tube	26
How to Load Media	27
Step 1: Loading the Paper Tube	27
Step 2: Passing the Media Through the Printer	29
Step 3: Securing the Media on the Paper Tube (Core)	30
Step 4: Taking Up the Media	32
To Take Up Media Manually.....	34
How to Remove Taken-up Media	35

Notes to Follow

When using this machine, be sure to comply with the conditions shown below. Failure to do so may lead to errors occurring, the output stopping at unexpected times, and the output work being obstructed.

Do Not Perform Operations That Pull the Media with Excessive Force

When this machine is used, a tension for taking up the media is applied, so it is necessary to avoid operations that pull the media with excessive force.

- Do not operate the MANUAL switch on the take-up unit leaving the loading lever pulled (lowered).
- Do not feed the media reversely by pressing the [▲] cursor key.

Turn Off the Automatic Cut-off Function for the Media

If the media is cut off, take-up will be interrupted at that point. If you use the software RIP or a similar method to set the automatic cut-off function, take-up may be interrupted at an unexpected point. We recommend that you turn off the automatic cut-off function.

Notes to Follow When "TU" Is Selected

This section only applies to models that are equipped with a cutting function.

There are a number of notes to follow in order to ensure that the media is not pulled with excessive force when "TU" is selected from the printer menu list. Failure to do so may lead to errors occurring, the output stopping at unexpected times, and the output work being obstructed.

[P. 4](#) Selecting the Take-up Method

- Do not carry out output performed with cutting (cutting only, printing and cutting, and cropping and cutting).
- When sending media forward with the [▼] cursor key, set the base point.
- Set the "PREFEED" menu item to "DISABLE".
- If there is the "FEED FOR DRY" menu item, set it to "DISABLE".

Notes to Follow When "TU3" Is Selected

- Do not carry out output performed with cutting (cutting only, printing and cutting, and cropping and cutting).
- When media is sent forward with the [▼] cursor key, the base point is set automatically.
- Set the "PREFEED" menu item to "DISABLE".
- If there is the "FEED FOR DRY" menu item, set it to "DISABLE".

This section only applies to the case in which the TB-30 option is attached to the LEC2-330 or MG-300.

For details, see the TB-30 Setup Guide.

<https://downloadcenter.rolanddg.com/TB-30>

Length Setting When "TU2" Is Selected

* If you are using the VF2-640, "TU2" is not displayed.

When "TU2" is selected in the printer menu list, no take-up is performed until the output of the piece of data is finished. Therefore, if the length to be output at one time is large, the media may touch the work floor and become soiled. To avoid soiling the media by touching the floor, output in approximately 300 mm (11.81 in.) increments.

P. 4Selecting the Take-up Method

Use the software RIP function to output limiting the length.

This section describes "how to output by limiting the length" using VersaWorks. For information on the detailed usage of VersaWorks, refer to the VersaWorks user's manual.

Procedure


1. Open the [Queue Properties] window (or the [Job Settings] window).
Select the input folder.

2. Click .

3. Select [CustomCUT] for [Size] under [Media Settings].

4. Set [H].

[Queue Properties] Window

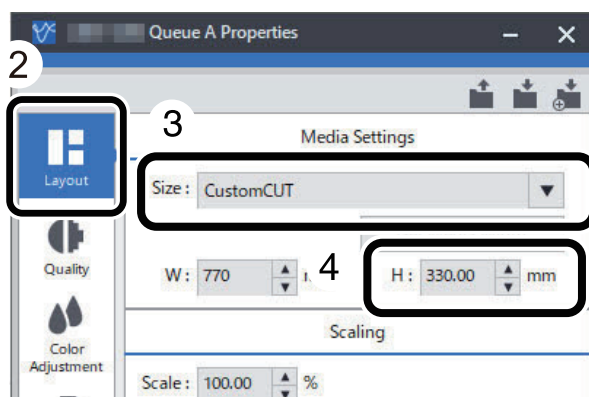

MEMO

The setting item and the method in the [Job Settings] window are the same as this procedure.

About Test Print

- Take-up is not performed during test print.

When the test print is finished, the length of media that was output is pulled back and is then taken up.

IMPORTANT

When you select "TU3", the media is not pulled back.

- To make continuous test prints, be sure to print in the "FEED" orientation.

Normally, when making continuous test prints, it is possible to select a print orientation of "FEED" or "SCAN".

However, when using this machine, be sure to print in the "FEED" orientation.

About the Paper Tube

Use the included paper tube.

The paper tube included is specifically for this machine. If a different tube is used, the media may not be taken up because the roll may fail to engage.

Paper tubes are components that wear out.

Paper tubes are components that wear out. Although replacement timing will vary depending on use, watch the condition of the paper tube and replace at an appropriate time so that the media can be taken up in good working order. Contact your authorized Roland DG Corporation dealer or visit our website (<https://www.rolanddg.com/>) if replacement items are needed.

How to Load Media

⚠ CAUTION

Load the roll media correctly.
Otherwise the media may fall and cause injury.

⚠ CAUTION

The roll media is approximately 40 kg (88 lb.).
To avoid injury, handle the roll media with care.

⚠ CAUTION

Never load media that weighs over 40 kg (88 lb.).
The machine may fail to withstand the weight and tip over or cause the media to fall.


⚠ CAUTION

Do not touch the dancer roller needlessly.
The media take-up unit and feeder may move suddenly, which may result in injury.


Step 1: Loading the Paper Tube

Procedure

1. Lower the dancer roller toward the rear.

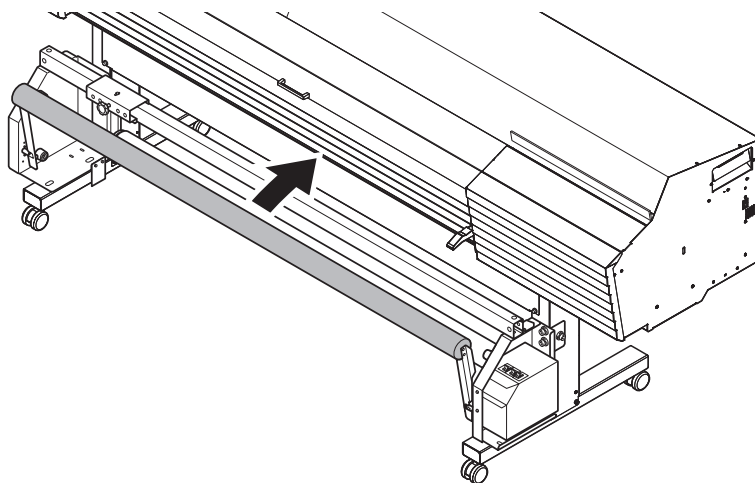

2. Loosen the arm retaining screw (A).
Loosen the screw to a point where the arm can be moved to the left and right.

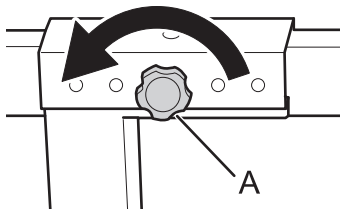


3. Install the paper tube to the end cap and fix the arm.

- (1) Right side: Push the paper tube against the stand leg side end cap and fit it securely.
- (2) Left side: Push the arm side end cap against the paper tube and fit it securely.
- (3) Tighten the arm retaining screw while pushing the arm forward.

IMPORTANT

- Do not overtighten the arm retaining screw.
Overtightening may make it difficult to remove the arm.
- Use the paper tube that is included with the roll.
If a different tube is used, the media may not be taken up because the roll may fail to engage.

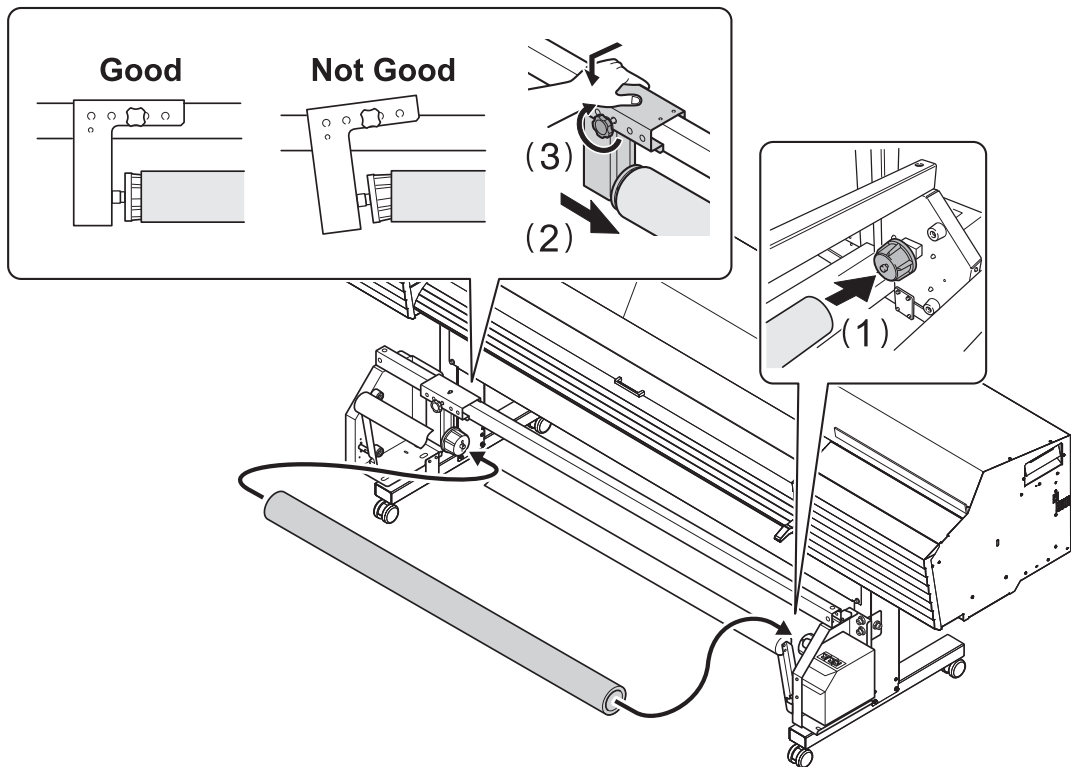

Step 2: Passing the Media Through the Printer

Procedure

1. Check that the printer's loading lever is in the up position.
2. Switch on the printer's sub power.
3. Check that the following menu items on the printer have been set to "DISABLE".
 - "PREFEED": Models that are equipped with a cutting function
 - "FEED FOR DRY": Models that are equipped with a print heater function

MEMO

For details on how to check and change the settings, refer to the instruction manual for your printer.

4. Press "MENU" then [◀] to return to the setup screen.

```
SETUP SHEET
◀ ROLL
```

5. Press [◀] or [▶] to select the take-up method.

[P. 4Selecting the Take-up Method](#)

6. Load the roll media onto the printer and lower the loading lever.

MEMO

 
For details on how to load, refer to the instruction manual for your printer.

7. Check that the media is loaded as described below.


- The media is loaded straight.
- All areas of the media are taut.

If the media has slack or is bent, raise the loading lever and load once again.

Good



Not Good

 

8. Press [ENTER].

Step 3: Securing the Media on the Paper Tube (Core)

Procedure

1. Make sure the screen in the figure is displayed.




2. Press [▼] to feed out the media until the tip of the media reaches the paper tube.

Check that the media is fed out straight.


If the media is not feeding straight, perform the loading operation once again.

Media is fed out 10 mm (0.39 in.) each time you press [▼]. Holding down the key lets you feed out paper continuously.

Good

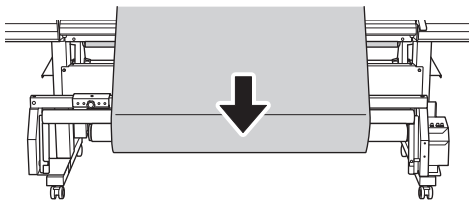

Not Good


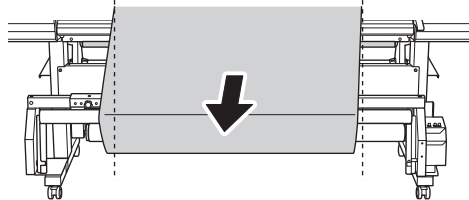


3. Attach the center and both ends of the media to the paper tube (core) using adhesive tape (A) (three locations in total).



(1) While pulling the media so that it does not sag, secure the center of the media.

(2) While pulling the media from the center toward the outer edges, and fix the left and right edges.

- Take-up with outward curl

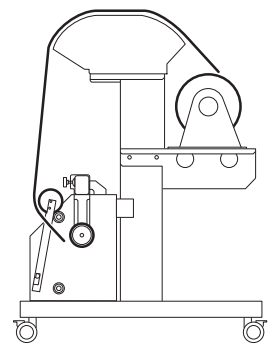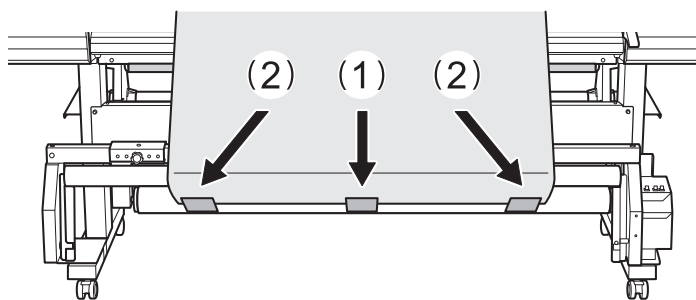

- Take-up with inward curl

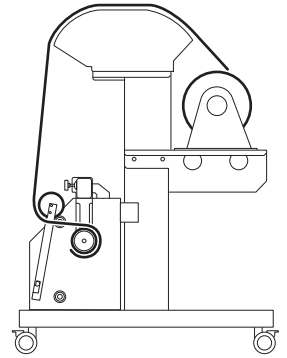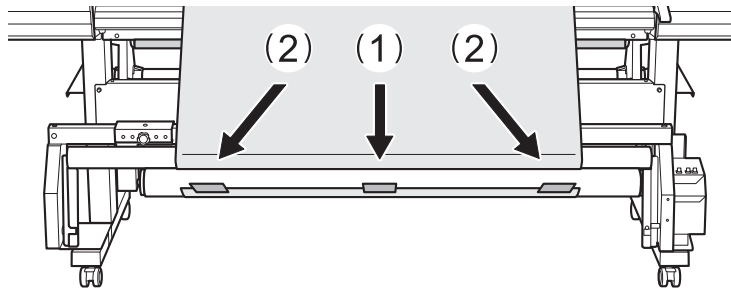


4. Press [ENTER].

The media is fed out and the screen shown in the figure appears.

```
TILT DANCER
ROLLER TO FRONT↵
```

5. Lower the dancer roller toward the front.
Check that all areas of the media are taut.

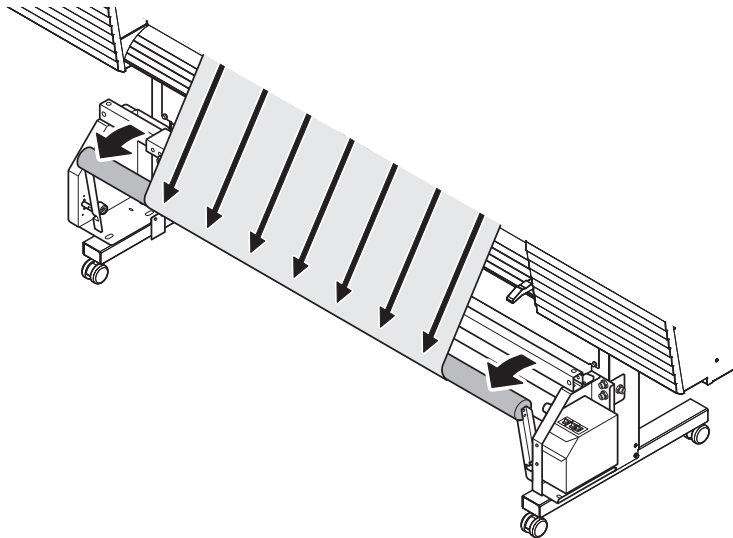

6. Press [ENTER].

The screen shown in the figure appears.



```
CHECK
TAKE-UP SETTING↵
```

Step 4: Taking Up the Media



Procedure

1. Set the AUTO switch on the take-up unit.

- Take-up with outward curl
Set the switch to [FORWARD].

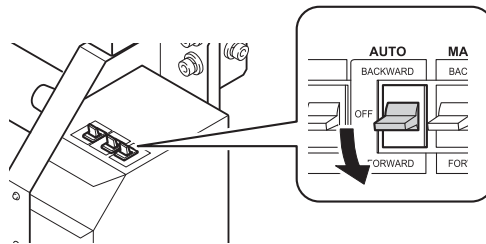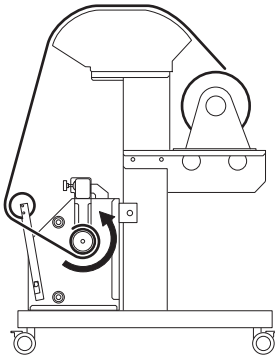

- Take-up with inward curl
Set the switch to [BACKWARD].

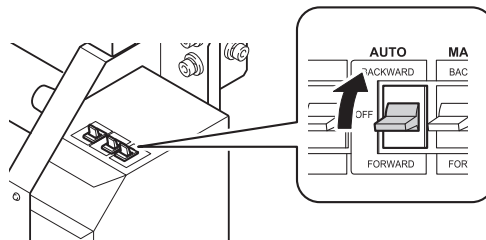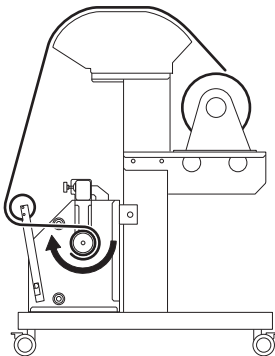

MEMO

When no media is loaded, lower the dancer roller all the way to the back.

2. Select the mode to match the media to be used.

Select either [STANDARD] or [TENSION] using the MODE switch.

Mode	Applicable media	Description
[STANDARD]	PVC etc.	The media is taken up with some slack. This is suited to stiff or slippery media.
[TENSION]	Tarpaulin, etc.	The media is stretched and taken up. This is suited to weak media and media that does not slip easily.

3. Press [ENTER].

The screen shown in the figure appears.



W1200mm

MEMO

When take-up starts, take care that the leading edge of the media does not get folded or bent.

This completes the setup of the media.

To Take Up Media Manually


It is possible to manually take-up the media by pressing the MANUAL switch.

However, do not operate the MANUAL switch on the take-up unit leaving the loading lever pulled (lowered).

If the media is pulled with excessive force, the protection function will activate and cause an error.

MEMO

- Take-up with inward curl: Move the MANUAL switch to the back (the [BACKWARD] side).
- Take-up with outward curl: Move the MANUAL switch to the front (the [FORWARD] side).

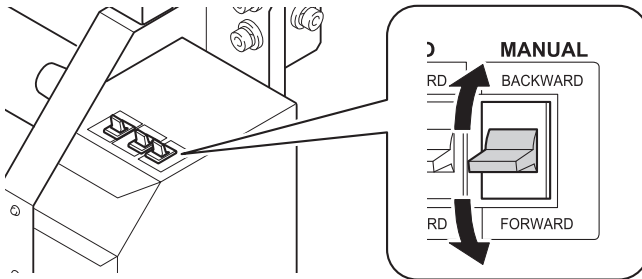


How to Remove Taken-up Media

⚠ CAUTION

Have two or more people available when removing (handling) the taken up media. Otherwise the media may fall and cause injury.

Procedure


1. Lower the dancer roller toward the rear.
2. With the media held down, cut off the sheet.
For details on how to cut off, refer to the instruction manual included with each printer.
3. Use the MANUAL switch to take-up the media.
4. Support the paper tube from below so that it does not fall.
5. Loosen the arm retaining screw (A) and the arm.

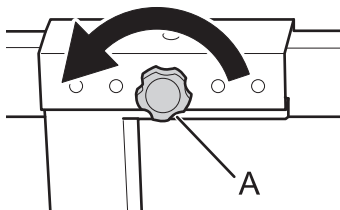

6. Pull the paper tube from the end cap.

MEMO

If the arm does not move, it may have dug into the rail slider. Moving the arm back and forth will free it from being stuck and it will become movable once again.

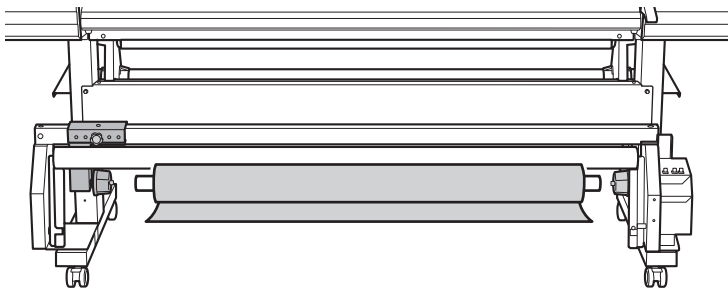

What to Do If

- The Take-up Unit Doesn't Take Up Media37
 - Are the power cord and AC adapter properly connected?37
 - Is the AUTO switch set to [OFF]?.....37
 - Is the AUTO switch direction properly set?.....37
 - Is the media automatic cut-off function active?37
 - Is the paper tube loaded properly?.....37
 - Is the paper tube used the one that is included?37
 - Is the paper tube bent?37
 - Have the media take-up direction and the AUTO switch of the TUC been set correctly?37
- Media Take-up Is Not Straight39
 - Is the media loaded correctly?39

The Take-up Unit Doesn't Take Up Media

Are the power cord and AC adapter properly connected?

Securely connect them so that they are not plugged in loosely and will not come loose.

Is the AUTO switch set to [OFF]?

Set the AUTO switch in accordance with the take-up direction.

Is the AUTO switch direction properly set?

Make sure the direction of the AUTO switch matches the take-up direction of the media.

Is the media automatic cut-off function active?

Take-up will be interrupted if the media is cut off.

Set the computer (software RIP) side so that the printer will not automatically cut off. For information on the automatic cut-off settings, refer to the documentation for the software RIP.

Is the paper tube loaded properly?

Fit the paper tube securely onto the end cap.

If it is not properly attached, the media may not be taken because the paper roll may fail to engage.

RELATED LINKS

- [P. 27Loading the Paper Tube](#)

Is the paper tube used the one that is included?

Use the paper tube that is included with the roll. If a different roll is used, the media may not be taken because the roll may fail to engage.

RELATED LINKS

- [P. 26About the Paper Tube](#)

Is the paper tube bent?

If the paper tube is bent, the media cannot be taken up properly.

Have the media take-up direction and the AUTO switch of the TUC been set correctly?

Cancel printing, check the AUTO switch setting, and then reload the media once more starting from the beginning.

RELATED LINKS

- [P. 27How to Load Media](#)

Media Take-up Is Not Straight

Is the media loaded correctly?

Remove the media, and reload the media once more starting from the beginning.

RELATED LINKS


- [P. 27How to Load Media](#)

Appendix

Locations of the Power Rating and Serial Number Labels41

Specifications 42

Locations of the Power Rating and Serial Number Labels

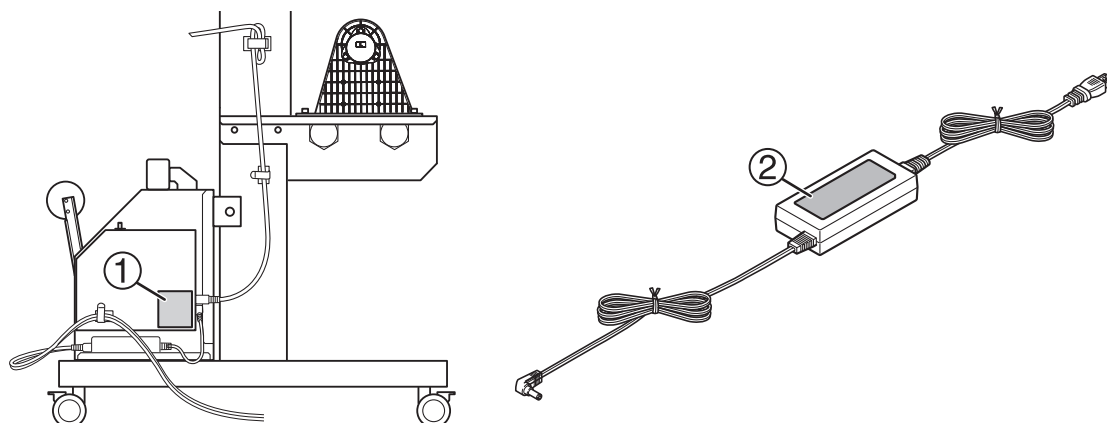

①	Serial number This number is required when you seek maintenance, servicing, or support. Never peel off the label.
②	Power rating Use an electrical outlet that meets the requirements for voltage, frequency, and amperage given here.

Specifications

		TUC-4		
Rails & accessories		TU4-64	TU4-54	TU4-30
Acceptable media widths		1,625 mm (63.97 in.) or less	1,371 mm (53.97 in.) or less	762 mm (30 in.) or less
Acceptable media weights		Max. 40 kg (88.18 lb.)* ¹		
Weight (total of right slider stay, rail, and accessories)		21 kg (46.3 lb.)	19 kg (41.9 lb.)	16.5 kg (36.38 lb.)
Power requirements	Dedicated AC adapter	AC 100 - 240 V $\pm$ 10 % 50/60 Hz		
	Machine	19 VDC 2.1 A		
Power consumption		Approx. 20 W		
Acoustic noise level		Approx. 64 dB (A) or less		
Environment		Temperature: 5 to 40°C (41 to 104°F), Humidity: 20 to 80% RH (no condensation)		

*1 The weight of the media that can actually be used depends on the conditions of the media that can be used with the printer.

