



# SP-540V ECO-SOL INK MODEL SP-300V ECO-SOL INK MODEL

# Important Notes for ECO-SOL MAX Users

Please be sure to read this before you begin setup for the machine. Be sure to carry out installation of ECO-SOL MAX ink cartridges according to procedure described in this document.

This document is the manual for the SP-540V and SP-300V (ECO-SOL INK models). You do not need it if you're using a sublimation-ink model.



This machine is compatible with **ECO-SOL MAX**.

Roland DG Corporation

# Important Notes to ECO-SOL MAX Users

### Filling with Ink for the First Time

When filling with ink for the first time after purchase, select ECO-SOL MAX as the ink type. For other operations, follow the instructions in the Setup Guide. Use cleaning cartridges intended for ECO-SOL INK.

#### Important!

➤ Selection of an incorrect ink type may reduce printing quality. Select it with care.



- ① Use **T** to select the ink type.
- 2 Press ENTER to enable the selection.

Ink	Colors	SELECT INK TYPE setting
ECO-SOL MAX	4-color (cyan, magenta, yellow, and black)	SELECT INK TYPE ◆ E-SOL Max 4COLOR ↓

### Usage and Handling of ECO-SOL MAX Ink

Other operations and methods of usage and handling are identical to those for ECO-SOL INK. Follow the instructions in the User's Manual.

## **Added Menu Items**

The new setting items described in the User's Manual have been added to the machine.

### **SELECT INKTYPE Item**

In addition to the existing "ECO-SOL INK" item, selection of "ECO-SOL MAX" is also possible.



#### E-SOL Max 4 COLOR


This is the ECO-SOL MAX 4-color mode (cyan, magenta, yellow, and black).

### **ECO-SOL 4 COLOR**

This is the ECO-SOL INK 4-color mode (cyan, magenta, yellow, and black).

### **INK CONTROL Menu Item**

[CHANGE INK SET] has been added. It is now possible to change from a state of being filled with conventional "ECO-SOL INK" to "ECO-SOL MAX" ink.

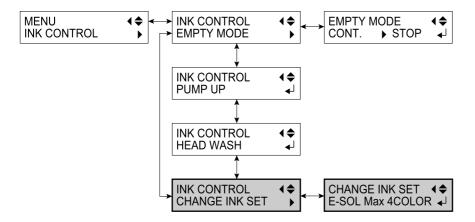

### E-SOL Max 4 COLOR

This changes the ink to the ECO-SOL MAX 4-color mode (cyan, magenta, yellow, and black).

### **ECO-SOL 4 COLOR**

This changes the ink to the ECO-SOL INK 4-color mode (cyan, magenta, yellow, and black).

#### Important!

- Follow the on-screen instructions to insert and remove the cartridges.
- ➤ All ink must be changed. ECO-SOL INK and ECO-SOL MAX ink cannot coexist.
- ➤ No SOL INK cleaning cartridges are required.



Copyright@2005 Roland DG Corporation